


nEW 961 - 971 - 971 SPDT - 974


Electronic controllers for refrigerating units

eliwell
by Schneider Electric



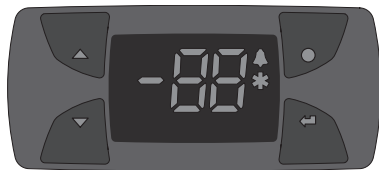


USER INTERFACE

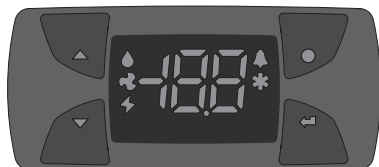





nEW 961



nEW 971/971 SPDT/974

| | | | |
|---|---|--|---|
|  | Defrost LED On fixed: automatic defrost active Flashing: manual defrost active Off: otherwise |  | Alarm LED On fixed: presence of an alarm Flashing: alarm silenced Off: otherwise |
|  | Evaporator fan LED On fixed: fans active Off: otherwise |  | Compressor LED On fixed: compressor active Flashing: delay, protection or activation blocked Off: otherwise |
|  | AUX LED On fixed: AUX output active Off: otherwise | NOTE: When switched on, the instrument performs a lamp test and for a few seconds, the display and LEDs flash to check their condition and proper operation. After the lamp test, the label Cu and its value will be shown for 2 secs. | |

KEYS

| | | | | | | | |
|--|--|---|--|---|--|---|--|
|  | UP Press and release • Scrolls the menu items • Increases the values Press for at least 5 sec • Function configurable by the user (see parameter H1) (see paragraph Key Functions) |  | DOWN Press and release • Scrolls the menu items • Decreases the values Press for at least 5 sec • Function configurable by the user (see parameter H2) (see paragraph Key Functions) |  | ESC Press and release • Returns up one level with respect to the current menu • Confirms the parameter value Press for at least 5 sec • Function configurable by the user (see parameter H3) (see paragraph Key Functions) |  | SET (ENTER) Press and release • Accesses the machine status menu and displays any alarms (if present) Press for at least 5 sec • Accesses the programming menu • Confirms the commands |
|--|--|---|--|---|--|---|--|

ELECTRIC CONNECTIONS

DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

- Disconnect all power from all equipment including connected devices, prior to removing any covers or doors, or installing or removing any accessories, hardware, cables, or wires.
- Always use a properly rated voltage sensing device to confirm the power is off where and when indicated.
- Replace and secure all covers, accessories, hardware, cables and wires.
- For all the devices where this is provided, confirm that a proper ground connection exists before applying power to the unit.
- Use only the specified voltage when operating this device and any associated products.

Failure to follow these instructions will result in death or serious injury.

This device has been designed to operate outside of any hazardous location.
Only install this device in zones known to be free of hazardous atmosphere.

DANGER

LOOSE OR BARE WIRING CAUSES ELECTRIC SHOCK

- Insulate electrical connections with suitable Faston covers.
- Make sure the cables are properly connected to the female Fastons before continuing with the wiring process.

Failure to follow these instructions will result in death or serious injury.

DANGER

POTENTIAL OF OVERHEATING AND FIRE

- Do not use with loads other than those indicated in the technical specification.
- Do not exceed the maximum permitted current; for higher loads, use a contactor with sufficient power capacity.

Failure to follow these instructions will result in death or serious injury.

DANGER

POTENTIAL FOR EXPLOSION

Install and use this equipment in non-hazardous locations only.

Failure to follow these instructions will result in death or serious injury.

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel.
No responsibility is assumed by Eliwell for any consequences arising out of the use of this material.

⚠ WARNING

UNINTENDED EQUIPMENT OPERATION

- Use appropriate safety interlocks where personnel and/or equipment hazards exist.
- Install and operate this equipment in an enclosure appropriately rated for its intended environment.
- Power line and output circuits must be wired and fused in compliance with local and national regulatory requirements for the rated current and voltage of the particular equipment.
- Do not use this equipment in safety-critical machine functions.
- Do not disassemble, repair, or modify this equipment.
- Do not mount devices in extremely damp and/or dirt-laden areas.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

⚠ WARNING

UNINTENDED EQUIPMENT OPERATION DUE TO CONNECTION



Signal leads (probes, digital inputs, communication and the signal electronic supply) must be routed separately from power and supply cables.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Probes (NTC) have no connection polarity and can be extended using a regular bipolar cable (note that the extension of the probes affects the EMC electromagnetic compatibility of the instrument: pay extreme attention to wiring).


MOUNTING - DIMENSIONS

The instrument is designed to be panel mounted. Make a 71x29 mm (2.80x1.14 in.) hole and insert the instrument, fastening it with the provided brackets. Do not assemble the instrument in areas subject to high humidity and/or dirt. It is in fact suited for use in areas with ordinary or normal levels of pollution. Keep the area surround the instrument's cooling slits well aerated.

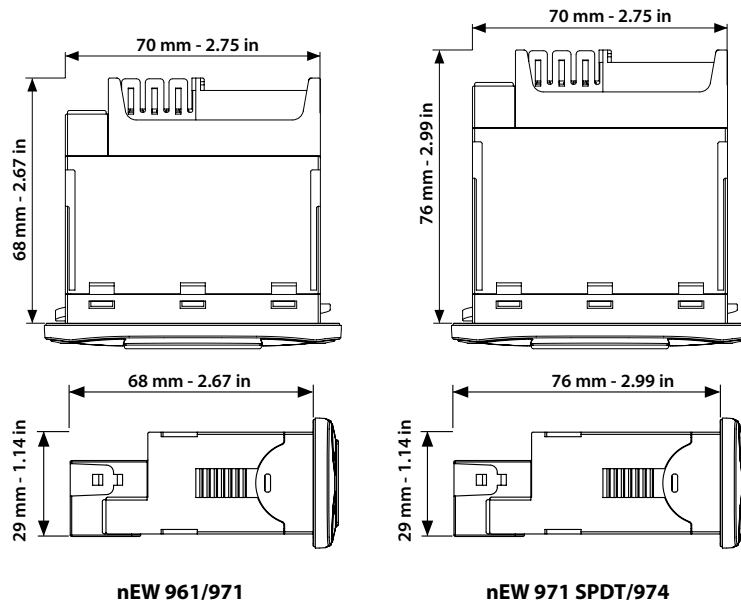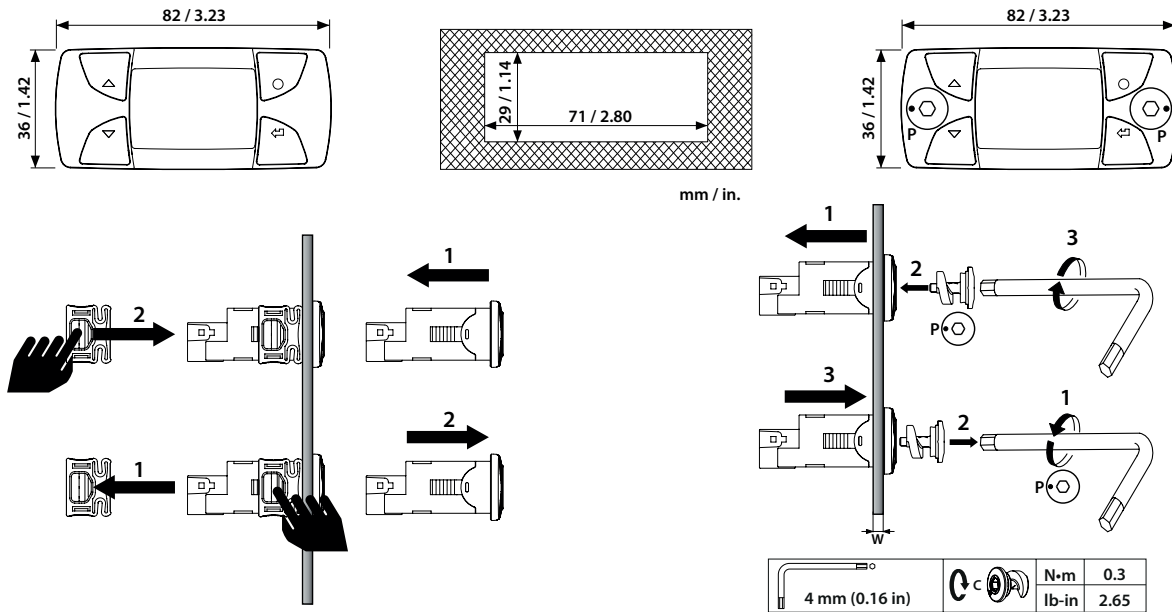


CONNECTIONS

nEW 961

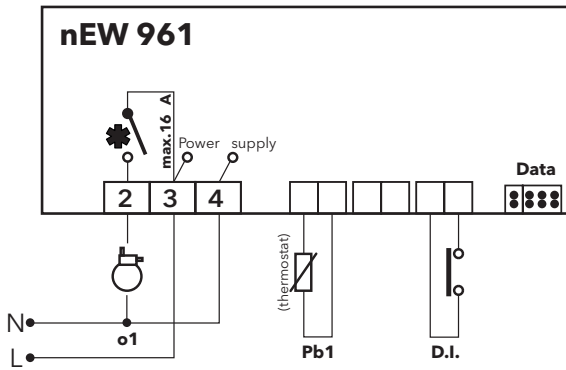


| TERMINALS | |
|-------------|------------------------------------|
| 2-3 | Compressor relay |
| 3-4 | Power supply input 100 ... 240 Vac |
| N-L | Power supply 100 ... 240 Vac |
| Pb1 | Pb1 probe |
| D.I. | Digital input |
| Data | CopyCard/DMI adapter port for nEW |

nEW 971

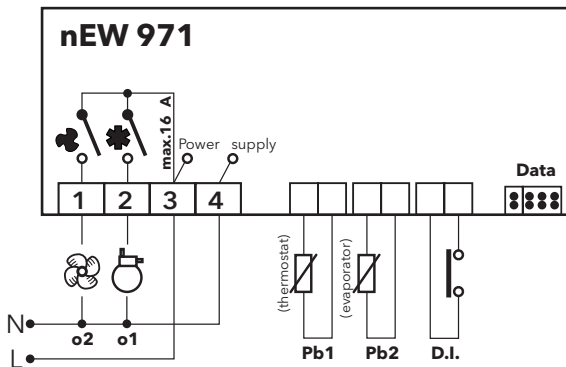


| TERMINALS | |
|-------------|------------------------------------|
| 1-3 | Fan relay |
| 2-3 | Compressor relay |
| 3-4 | Power supply input 100 ... 240 Vac |
| N-L | Power supply 100 ... 240 Vac |
| Pb2 | Pb2 probe |
| Pb1 | Pb1 probe |
| D.I. | Digital input |
| Data | CopyCard/DMI adapter port for nEW |

nEW 971 SPDT

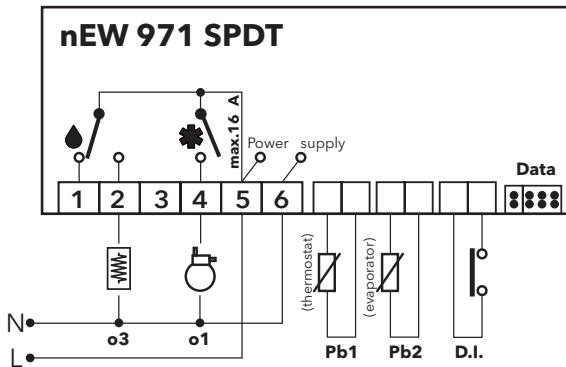

| TERMINALS | |
|--------------|------------------------------------|
| 1-2-5 | Defrosting relay |
| 4-5 | Compressor relay |
| 5-6 | Power supply input 100 ... 240 Vac |
| N-L | Power supply 100 ... 240 Vac |
| Pb2 | Pb2 probe |
| Pb1 | Pb1 probe |
| D.I. | Digital input |
| Data | CopyCard/DMI adapter port for nEW |

nEW 974

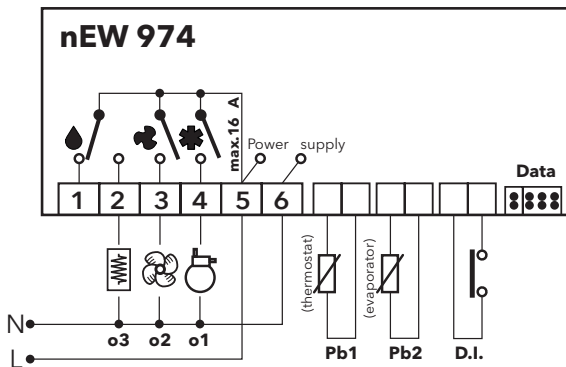

| TERMINALS | |
|--------------|------------------------------------|
| 1-2-5 | Defrosting relay |
| 3-5 | Fan relay |
| 4-5 | Compressor relay |
| 5-6 | Power supply input 100 ... 240 Vac |
| N-L | Power supply 100 ... 240 Vac |
| Pb2 | Pb2 probe |
| Pb1 | Pb1 probe |
| D.I. | Digital input |
| Data | CopyCard/DMI adapter port for nEW |

TECHNICAL DATA (EN 60730-2-9)

| | |
|----------------------------|---|
| Classification: | operating (Not safety) controls for incorporation |
| Assembly: | on a panel, with a drilling template 71x29 mm (2.80x1.14 in.) |
| Type of action: | 1.B |
| Degree of pollution: | 2 |
| Insulation material group: | IIIa |
| Overvoltage category: | II |
| Rated impulsive voltage: | 2500 V |
| Temperature: | Operating: -20 ... 60 °C / -4 ... 140 °F Storage: -30 ... 85 °C / -22 ... 185 °F |
| Power supply: | 100 ... 240 Vac ($\pm 10\%$) 50/60 Hz |
| Consumption: | 3.2 W max |
| Fire resistance category: | D |
| Software class: | A |

NOTE: check the power supply declared on the label of the instrument: consult the Sales office regarding the availability of power supply and relay capacity.

FURTHER INFORMATION

Input characteristics

| | |
|-----------------|--|
| Display ranges: | nEW 961 : -50.0...90.0 °C / -58.0...99.0 °F (on the display with 2 digits + sign) nEW 971/971 SPDT/ 974 : -50...110 °C / -58.0...199 °F (on the display with 2 ½ digits + sign) |
| Accuracy: | Best of 0.5 % of the full-scale +1 digit |
| Resolution: | 0.1 °C / 0.1 °F |
| Analog inputs: | nEW 961 : 1 NTC input nEW 971/971 SPDT/974 : 2 NTC inputs |
| Digital inputs: | 1 voltage free digital input |

Output characteristics

| | |
|--|--|
| Digital outputs: | |
| nEW 961: 1 compressor relay: | UL60730 2 Hp (12 FLA-72 LRA) @ 240 Vac or 1 Hp (16 FLA-96 LRA) @ 120 Vac - 100k cycles |
| nEW 971: 1 compressor relay: | UL60730 2 Hp (12 FLA-72 LRA) @ 240 Vac or 1 Hp (16 FLA-96 LRA) @ 120 Vac - 100k cycles |
| 1 fans relay: | 5 A resistive (2 FLA-12 LRA) @ 240 Vac or 120 Vac |
| nEW 971 SPDT: 1 compressor relay: | UL60730 2 Hp (12 FLA-72 LRA) @ 240 Vac or 1 Hp (16 FLA-96 LRA) @ 120 Vac - 100k cycles |
| 1 defrosting relay: | NO 8 A - NC 6 A resistive NO 2.9 FLA-17.4 LRA @ 240 Vac - 120 Vac |
| nEW 974: 1 compressor relay: | UL60730 2 Hp (12 FLA-72 LRA) @ 240 Vac or 1 Hp (16 FLA-96 LRA) @ 120 Vac - 100k cycles |
| 1 defrosting relay: | NO 8 A - NC 6 A resistive NO 2.9 FLA-17.4 LRA @ 240 Vac - 120 Vac |
| 1 fans relay: | 5 A resistive (2 FLA-12 LRA) @ 240 Vac or 120 Vac |

Mechanical characteristics

| | |
|-------------|--|
| Container: | Resin body PC+ABS UL94 V-0, polycarbonate cover, thermoplastic resin keys |
| Dimensions: | Front panel 82x36 mm (3.23x1.42 in.); depth (excluding terminals): - nEW 961/971: 68 mm (2.68 in.) - nEW 971 SPDT/974: 76 mm (2.99 in.) |
| Terminals: | Faston / RAST (6.3 mm / 0.25 in.) with patch 5.08 mm (0.2 in.) Operating temperature of female connectors: 125 °C / 257 °F minimum, cables with a 2.5 mm ² (13 AWG) section |
| Humidity: | Operating / Storage: 10...90 % RH (non-condensing) |

Regulations

| | |
|----------------|--|
| Food Security: | The device complies with standard EN13485 as follows: <ul style="list-style-type: none">• suitable for conservation• application air• climatic environment A• measurement class 1 in a range from -25 ... 15 °C / -13 ... 59 °F (*) (*only and exclusively using Eliwell NTC probes) |
|----------------|--|

Approvals

| | |
|--|-----------------------|
| UL: | UL60730: file E233482 |
| Relays tested according to 33.5 of IEC 60079-15:2005 | |

NOTE: The technical characteristics provided in this document concerning the measurement (range, accuracy, resolution, etc.) refer to the instrument itself only and not to any provided accessories, such as the probes.

DIAGNOSTICS

The alarm condition is always signaled by the alarm icon 📢.

To turn off the relative icon will continue flashing.

NOTE: If alarm exclusion times are in progress (**AL** folder of the parameter table), the alarm is not signaled.

ALARMS

| Label | Description | Cause | Effects | Troubleshooting |
|-----------|--|---|--|--|
| E1 | Pb1 probe error (cell) | <ul style="list-style-type: none"> Reading of values outside the operating range Probe is inoperable /short circuit/open | <ul style="list-style-type: none"> Display of label E1 Fixed alarm icon Disabling of the max/min alarm regulator Compressor operation based on the parameters P0 and P1 | <ul style="list-style-type: none"> Check the type of probe (NTC) Check the probe wiring Replace the probe |
| E2 | Pb2 probe error (defrosting) (nEW 971/971 SPDT/974 only) | <ul style="list-style-type: none"> Reading of values outside the operating range Probe is inoperable/short circuit/open | <ul style="list-style-type: none"> Display of label E2 Fixed alarm icon Defrosting ends due to time out (d3) The evaporator fans are disabled | <ul style="list-style-type: none"> Check the type of probe (NTC) Check the probe wiring Replace the probe |
| Ht | HIGH alarm Pb1 temperature | Value read by Pb1 > A2 after time equal to A7 . (see 'TEMP. ALARMS MAX/MIN') | <ul style="list-style-type: none"> Recording of label Ht in the AL folder Fixed alarm icon No effect on regulation | Wait for the value ready by Pb1 to return below A2-A1 |
| Lt | LOW alarm Pb1 temperature | Value read by Pb1 < A3 after time equal to A7 . (see 'TEMP. ALARMS MAX/MIN') | <ul style="list-style-type: none"> Recording of label Lt in the AL folder Fixed alarm icon No effect on regulation | Wait for the value ready by Pb1 to return above A3+A1 . |
| EA | External alarm | Activation of the digital input (i3 = 6) | <ul style="list-style-type: none"> Recording of label EA in the AL folder Fixed alarm icon | Check and remove the external cause that caused the alarm on D.I. |
| ES | Energy Saving + reduced set point | <ul style="list-style-type: none"> Activation of the digital input (i3 = 1,5, 8) Activation from key if H1...3=2 (see paragraph Key Functions) | <ul style="list-style-type: none"> Display of label ES alternating with the setpoint value Regulation to the value set at C5 parameter. | <ul style="list-style-type: none"> D.I. Open Press associated with the function key |
| OP | Alarm Door open | Activation of the digital input (i3 = 4) (for a time greater than r1) | <ul style="list-style-type: none"> Recording of label OP in the AL folder Fixed alarm icon | <ul style="list-style-type: none"> Close the door Delayed function defined by A6 |

MAX/MIN TEMPERATURE ALARMS

| | Temperature in absolute value relative to setpoint (A0=1) | Temperature in absolute value (A0=0) |
|---|---|---|
| Minimum temperature alarm | | |
| Maximum temperature alarm | | |
| Deactivation of the minimum temperature alarm | $\text{Temp.} \geq \text{SP} + \text{A3} + \text{A1}$ or $\geq \text{SP} - \text{A3} + \text{A1}$ (A3 < 0) | $\text{Temp.} \geq \text{A3} + \text{A1}$ |
| Deactivation of the maximum temperature alarm | $\text{Temp.} \leq \text{SP} + \text{A2} - \text{A1}$ (A2 > 0) | $\text{Temp.} \leq \text{A2} - \text{A1}$ |
| | * if A3 is negative, $\text{SP} + \text{A3} < \text{SP}$ ** if A2 is negative, $\text{SP} + \text{A2} < \text{SP}$ | |

PASSWORD

Password Ur: permits access to the **User** parameters. By default, the password is not enabled (**Ur=0**).

To enable it (**y8≠0**): press 📢 for more than 5 seconds, scroll the parameters with ⬆️ and ⬇️ until finding the label **y8**, press 📢 to display its value, change it with ⬆️ and ⬇️ and save it by pressing 📢 or 📣. If enabled, it will be requested to access the User parameters.

Password In: permits access to the **Installer** parameters. By default, the password is enabled (**In=15**).



To change it (**y9≠15**): press 📢 for more than 5 seconds, scroll the parameters with ⬆️ and ⬇️ until finding the label **In**, press 📢 set the value '15' with ⬆️ and ⬇️ and confirm with 📢. Scroll the parameters with ⬆️ and ⬇️ until finding the label **y9**, press 📢 to display the value, change it with ⬆️ and ⬇️ and save it by pressing 📢 or 📣. The visibility of **In** is:

- Ur≠0 and In ≠0:** Pressing 📢 for more than 5 seconds displays **Ur** and **In**. It is possible to decide whether to access the **User** parameters (**Ur**) or the **Installer** parameters (**In**).
- Otherwise:** The password **In** is among the **User** parameters. If enabled, it will be requested to access the **Installer** parameters and to enter it, proceed as described for the password **Ur**.

NOTE: If the entered value is incorrect, the label **Ur / In** will be displayed again. Repeat the procedure.




MENU ACCESS AND USE


The resources are organized in 2 menus that are accessed as follows:

- **Machine status** menu: by pressing and releasing the button .
- **Programming** menu: pressing the button  for more than 5 seconds.

If the keypad is not pressed for more than 15 seconds (time-out) or pressing the button  once confirms the last value shown on the display and the previous view is displayed.

'MACHINE STATUS' MENU

Press and release the button  to access the **Machine status** menu. If no alarms are in progress, the label **SP** is displayed. Press the buttons  and  to scroll all the menu folders:

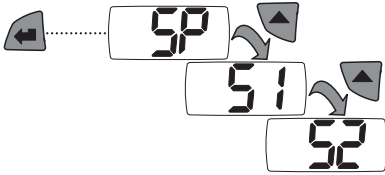


- **SP**: Setpoint setting folder;
- **S1**: probe 1 - Pb1 value folder;
- **S2**: probe 2 - Pb2 value folder (**nEW 971/971 SPDT/974** only);
- **AL**: alarm folder (**if there are no active alarms, the label '--' appears**);
- **rE**: Firmware release.

SET THE SETPOINT:

To view the Setpoint value, press the button  when the label **SP** is displayed. The Setpoint value appears on the display. To change the Setpoint value, press the buttons  and  within 15 sec. To confirm the change, press  or .

LOCK SETPOINT CHANGE:

The keypad can be locked by suitably programming the parameter **y4**.


If the keypad is locked, it is possible to access the **Machine status** menu by pressing the button  and view the Setpoint, but the value cannot be changed. To unlock the keypad, repeat the procedure used for locking it.

PROBE DISPLAY:

If the labels **S1** or **S2*** are present, pressing the button  displays the value measured by the associated probe.



- NOTE:**
- (*) **S2** is only present in models **nEW 971/971 SPDT/974**;
 - the displayed value **CANNOT** be changed.

'PROGRAMMING' MENU

To enter the 'Programming' menu, press the button  for more than 5 seconds. If required, an access PASSWORD **Ur** will be requested for the **User** parameters and **In** for the **Installer** parameters (see the **PASSWORD** paragraph).

'**User**' parameters: Upon access, the display shows the first parameter (**C1**).

Press  and  to scroll all the parameters for the current level. Select the desired parameter by pressing .

Press  and  to change it and  or  to save the change.

'**Installer**' parameters: Upon access, the display shows the first parameter (**C1**).

Press  and  to scroll all the parameters for the current level. Select the desired parameter by pressing .

Press  and  to change it and  or  to save the change.

NOTE: switch the device off and on again each time the parameter configuration is changed.

KEY FUNCTIONS

Through parameters **H1**, **H2** and **H3**, it is possible to assign one of the 3 functions listed below:

- **0** = Disabled;
- **1** = Manual defrost (label **dF**);
- **2** = Energy Saving (label **EA**);
- **3** = Stand-by (label **St**);
- **4** = Not used.

Key functions can be activated as follows:

1. Press the corresponding key for at least 6 seconds;
2. When the label associated to the function appear, press the SEt  key for at least 2 seconds. If conditions is allowed, the function will be activated.

To disable the function, repeat the same procedure.

With the instrument in **stand-by** mode, its operation depends on the **y3** parameter:

- **y3=0**: display off; the regulators and the icons are active and the instrument signals possible alarms by activating the alarm icon. (to display the alarm, access the **AL** folder of the **Machine status** menu);
- **y3=1**: display off; the regulators and the alarms are blocked;
- **y3=2**: the display shows the label **OF**; the regulators and alarms are blocked.

Manual activation of the defrost cycle is achieved by setting the Manual Defrost function (**Hx** = 1) at the press of a button and following the activation procedure described above. If the conditions for defrosting are not met:

- the parameter **P5** ≠ **0**;
- the temperature of the evaporator probe Pb2 is higher than the end of defrost temperature (only **nEW 971/971 SPDT/974**).

The display flashes 3 times to signal that the operation will not be carried out.

SMART DEFROST

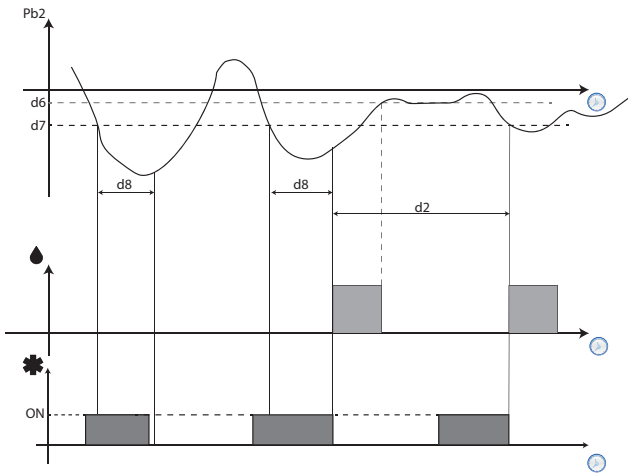


Fig.1 Smart Defrost Operation Diagram

Smart defrost will activate if:

- Temperature Pb2 < **d7**;
- The compressor must be on for at least a time > **d8**.

In the case of a defrosting probe in error or not connected, smart defrost can be started automatically if **d2** > 0.

Smart defrost will not activate if:

- Temperature Pb2 > **d7**.

FILTER DISPLAY


The temperature shown on the display can be filtered through a low-pass filter the input for which is the probe temperature.

If the temperature exceeds -5.0 °F for longer than 15 min, the filter is automatically deactivated.

The filter is reactivated when the temperature read by the probe falls below -5.0 °F. Below is an example of filter operation:

| FILTER DISPLAY OPERATION | | | | | | | | | | | | | | | | | |
|--------------------------|------------|------------|--------|----------------------|----------------|------------------|------------|------------|-------|----------------------|----------------|------------------|------------|------------|-------|----------------------|----------------|
| J1 = 10; J2 = 1. | | | | | | J1 = 10; J2 = 4. | | | | | | J1 = 10; J2 = 7. | | | | | |
| Interval | Time [sec] | Time [min] | Δ% | Filtered Disp. temp. | Actual Display | Interval | Time [sec] | Time [min] | Δ% | Filtered Disp. temp. | Actual Display | Interval | Time [sec] | Time [min] | Δ% | Filtered Disp. temp. | Actual Display |
| 0 | 0 | 0.0 | 0.0% | 35.00 | 35 | 0 | 0 | 0.0 | 0.0% | 35.00 | 35 | 0 | 0 | 0.0 | 0.0% | 35.00 | 35 |
| 1 | 10 | 0.2 | 20.0% | 36.00 | 36 | 1 | 10 | 0.2 | 2.5% | 35.13 | 35 | 1 | 10 | 0.2 | 0.3% | 35.02 | 35 |
| 2 | 20 | 0.3 | 36.0% | 36.80 | 37 | 2 | 20 | 0.3 | 4.9% | 35.25 | 35 | 2 | 20 | 0.3 | 0.6% | 35.03 | 35 |
| 3 | 30 | 0.5 | 48.8% | 37.44 | 37 | 3 | 30 | 0.5 | 7.3% | 35.37 | 35 | 3 | 30 | 0.5 | 0.9% | 35.04 | 35 |
| 4 | 40 | 0.7 | 59.0% | 37.95 | 38 | 4 | 40 | 0.7 | 9.6% | 35.48 | 35 | 4 | 40 | 0.7 | 1.2% | 35.06 | 35 |
| 5 | 50 | 0.8 | 67.2% | 38.36 | 38 | 5 | 50 | 0.8 | 11.9% | 35.59 | 36 | 5 | 50 | 0.8 | 1.5% | 35.07 | 35 |
| 6 | 60 | 1.0 | 73.8% | 38.69 | 39 | 6 | 60 | 1.0 | 14.1% | 35.70 | 36 | 6 | 60 | 1.0 | 1.8% | 35.09 | 35 |
| 7 | 70 | 1.2 | 79.0% | 38.95 | 39 | 7 | 70 | 1.2 | 16.2% | 35.81 | 36 | 7 | 70 | 1.2 | 2.1% | 35.10 | 35 |
| 8 | 80 | 1.3 | 83.2% | 39.16 | 39 | 8 | 80 | 1.3 | 18.3% | 35.92 | 36 | 8 | 80 | 1.3 | 2.4% | 35.12 | 35 |
| 9 | 90 | 1.5 | 86.6% | 39.33 | 39 | 9 | 90 | 1.5 | 20.4% | 36.02 | 36 | 9 | 90 | 1.5 | 2.7% | 35.13 | 35 |
| 10 | 100 | 1.7 | 89.3% | 39.46 | 39 | 10 | 100 | 1.7 | 22.4% | 36.12 | 36 | 10 | 100 | 1.7 | 3.0% | 35.15 | 35 |
| ... | ... | ... | ... | ... | ... | ... | ... | ... | ... | ... | ... | ... | ... | ... | ... | ... | ... |
| 35 | 350 | 5.8 | 100.0% | 40.00 | 40 | 35 | 350 | 5.8 | 58.8% | 37.94 | 38 | 35 | 350 | 5.8 | 10.0% | 35.50 | 35 |
| 36 | 360 | 5.0 | 100.0% | 40.00 | 40 | 36 | 360 | 5.0 | 59.8% | 37.99 | 38 | 36 | 360 | 5.0 | 10.3% | 35.51 | 36 |

Tab.1 Example of filter display operation

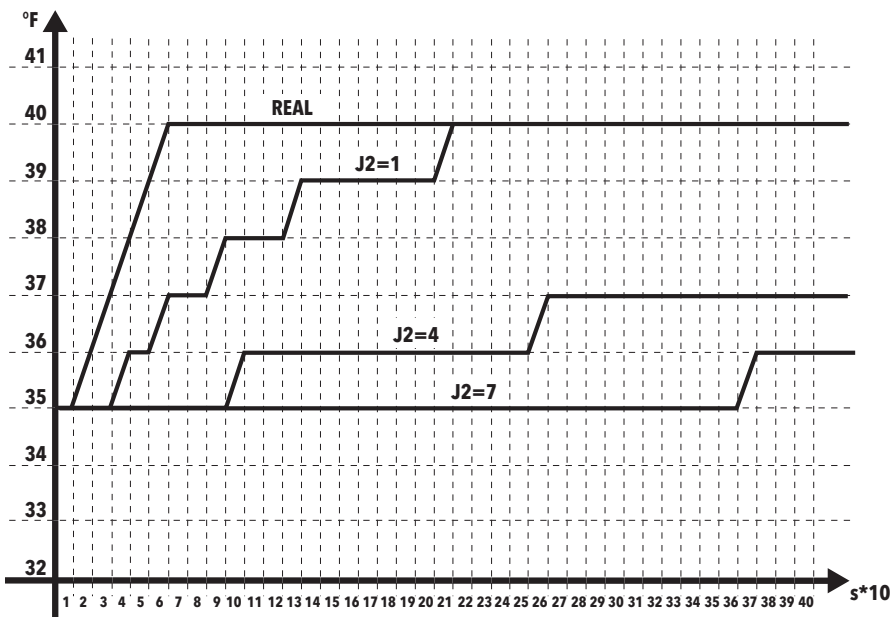

The diagram shows an example of filter operation with regard to the real change in (unfiltered) temperature and the following conditions:

- **J1** = 10 s;
- **J2** = 1, 4, 7.

Fig.2 Filter Display Operation Diagram

PARAMETERS TABLE

| PAR. | DESCRIPTION | RANGE | M.U. | nEW MODELS | | | | LEVEL |
|-------------------|---|----------------|-------|------------|-------|----------|-------|-----------|
| | | | | 961 | 971 | 971 SPDT | 974 | |
| SP | Temperature regulation SEtpoint. The SEtpoint is displayed only in the 'Machine Status' menu. | C2 ... C3 | °C/°F | 35.0 | 35.0 | 35.0 | 35.0 | / |
| COMPRESSOR | | | | | | | | |
| C1 | Compressor relay activation differential. The compressor stops when reaching the entered Setpoint (upon indication of the regulation probe) and restarts at a temperature value equal to the setpoint plus the value of the differential. NOTE: C1 cannot have the value 0. | 1.0 ... 30.0 | °C/°F | 2.0 | 2.0 | 2.0 | 2.0 | User/Inst |
| C2 | Minimum value that can be attributed to the setpoint. NOTE: The two sets are interdependent: C2 cannot be greater than C3 and vice versa. | -58.0 ... C3 | °C/°F | -58.0 | -58.0 | -58.0 | -58.0 | User/Inst |
| C3 | Maximum value that can be attributed to the setpoint. NOTE: The two sets are interdependent: C3 cannot be less than C2 and vice versa. | C2 ... 199 | °C/°F | 99.0 | 199 | 199 | 199 | User/Inst |
| C4 | Select Cool/Heat. 0 =Cool; 1 =Heat. | 0/1 | flag | 0 | 0 | 0 | 0 | User/Inst |
| C5 | Temperature value to be added algebraically to the setpoint in the case of an enabled reduced set (Economy function). | -30.0 ... 30.0 | °C/°F | 3.0 | 3.0 | 3.0 | 3.0 | Inst |
| P0 | Regulator switch-on time for inoperable probe: • if P0 = 1 and P1 = 0 , the compressor always remains ON; • if P0 > 0 and P1 > 0 , it operates in duty cycle mode. | 0 ... 99 | min | 1 | 1 | 1 | 1 | Inst |
| P1 | Regulator switch-off time for inoperable probe: • if P1 = 1 and P0 = 0 , the compressor always remains OFF; • if P0 > 0 and P1 > 0 , it operates in duty cycle mode. | 0 ... 99 | min | 1 | 1 | 1 | 1 | Inst |
| P2 | Compressor relay activation delay time from call. | 0 ... 99 | sec | 0 | 0 | 0 | 0 | Inst |
| P3 | Delay time after switch off and the next switch on. | 0 ... 99 | min | 0 | 0 | 0 | 0 | Inst |
| P4 | Delay time between two subsequent compressor starts. | 0 ... 99 | min | 0 | 0 | 0 | 0 | Inst |
| P5 | Output activation delay time from the switch on of the instrument or after a power outage. 0 = Not active. | 0 ... 99 | min | 0 | 0 | 0 | 0 | Inst |
| P6 | Compressor OFF before to activate the defrost output. | 0 ... 99 | min | 0 | 0 | 0 | 0 | User/Inst |
| P7 | Compressor ON before to activate the defrost output. | 0 ... 99 | min | 0 | 0 | 0 | 0 | User/Inst |
| P8 | Minimum compressor time ON. | 0 ... 99 | min | 0 | 0 | 0 | 0 | User/Inst |
| P9 | Maximum compressor time ON. | 0 ... 99 | min | 0 | 0 | 0 | 0 | User/Inst |
| DEFROSTING | | | | | | | | |
| d0 | Selection of the defrosting interval calculation mode: 0 = Defrost disabled; 1 = Hours of compressor operation (DIGIFROST® method); defrosting active ONLY with compressor on; NOTE: the operation time of the compressor is calculated independently of the evaporator probe (the calculation is active even if the evaporator probe is absent or inoperable). 2 = Hours of device operation, the defrosting calculation is always active when the machine is on and starts at every power-on of instrument; 3 = Stop compressor. Each time the compressor stops, a defrosting cycle is performed in function of d1 ; 4 = Temperature. Defrost is active when the evaporator temperature remains below the threshold of parameters d7 for a period of d8 ; (only nEW 971/971 SPDT/974); 5 = Smart Defrost. Defrost is active when the Evaporator temperature remains below the threshold of parameters d7 for a period of d8 and the compressor is on; (See 'Smart Defrost'); 6 = Not used. | 0 ... 6 | num | 2 | 2 | 2 | 2 | Inst |
| d1 | Type of defrost. 0 = Electric defrost - end of defrost due to time-out (time d3); 1 = Cycle inversion defrost (hot gas) - end of defrost due to time-out (time d3); 2 = Electric defrost - end defrost due to temperature (parameter d6) (only nEW 971/971 SPDT/974); 3 = Cycle inversion defrost (hot gas) - end defrost due to temperature (parameter d6) (only nEW 971/971 SPDT/974); 4 = Not used. | 0 ... 4 | num | | 2 | 2 | 2 | User/Inst |
| d2 | Time interval between the start of two subsequent defrost operations. 0 = Function disabled (defrost NEVER takes place). | 0 ... 99 | hours | 6 | 6 | 6 | 6 | User/Inst |
| d3 | Defrost time-out; determines the maximum defrost duration. | 1 ... 99 | min | 30 | 30 | 30 | 30 | User/Inst |
| d5 | Delay time for starting the first defrost from the call. | 0 ... 99 | min | 0 | 0 | 0 | 0 | Inst |
| d6 | End of defrost temperature (measured by the evaporator probe). | -58.0 ... 199 | °C/°F | | 45.0 | 45.0 | 45.0 | User/Inst |
| d7 | Temperature threshold for switching on Smart defrost. | -58.0 ... 199 | °C/°F | -30.0 | -30.0 | -30.0 | -30.0 | Inst |

| PAR. | DESCRIPTION | RANGE | M.U. | nEW MODELS | | | | LEVEL | | |
|---|--|--|--------|------------|-------|----------|-------|-----------|---|--|
| | | | | 961 | 971 | 971 SPDT | 974 | | | |
| d8 | Time the evaporator temperature must remain below the threshold - Smart defrost. | 1 ... 99 | min | 1 | 1 | 1 | 1 | Inst | | |
| d9 | Determines if upon switching on, the instrument must activate defrosting (providing that the temperature measured on the evaporator permits it). 0 = No, does not defrost when switching on; 1 = Yes, defrosts when switching on. | 0/1 | flag | 0 | 0 | 0 | 0 | Inst | | |
| FANS | | | | | | | | | | |
| F0 | Evaporator fan operating mode. The valve status will be: When the fans operate in duty-cycle, the parameters F7 and F8 determine the fan ON and OFF times. | 0 ... 6 | num | 1 | 1 | 1 | 1 | Inst | | |
| | F0 | | | | | | | | COMPRESSOR ON | COMPRESSOR OFF |
| | 0 | | | | | | | | Fan OFF | Fan OFF |
| | 1 | | | | | | | | Fan always ON | Fan always OFF |
| | 2 | | | | | | | | Fan always ON | Fan in duty cycle |
| | 3 | | | | | | | | Fan in duty cycle | Fan in duty cycle |
| | 4 | | | | | | | | Temperature-controlled fan - if probe 2 is inoperable or not present, fan always ON | Fan always OFF |
| | 5 | | | | | | | | Temperature-controlled fan - if probe 2 is inoperable or not present, fan always ON | Temperature-controlled fan - if probe 2 is inoperable or not present, fan always OFF |
| 6 | Temperature-controlled fan - if probe 2 is inoperable or not present, fan in duty cycle | Temperature-controlled fan - if probe 2 is inoperable or absent, fan in duty cycle | | | | | | | | |
| NOTE: Contact the sales office if the application is required for use for more than 100k cycles. | | | | | | | | | | |
| F1 | Characterizes the parameter F2 which can be expressed as an absolute temperature value or as a value relative to the Setpoint. 0 = Absolute; 1 = Relative. | 0/1 | flag | 0 | 0 | 0 | 0 | Inst | | |
| F2 | Fan stopping temperature; if Pb2 > F2 , the fans are stopped. | -58.0 ... 199 | °C/°F | 50.0 | 50.0 | 50.0 | 50.0 | User/Inst | | |
| F3 | Fan activation differential. | 1.0 ... 25.0 | °C/°F | 2.0 | 2.0 | 2.0 | 2.0 | Inst | | |
| F4 | Dripping time. | 0 ... 99 | min | 2 | 2 | 2 | 2 | User/Inst | | |
| F5 | Used to select or deselect the exclusion of the evaporator fans during defrosting. 0 = No; 1 = Yes. | 0/1 | flag | 1 | 1 | 1 | 1 | User/Inst | | |
| F6 | Evaporator fans switch-Off delay after compressor disabled. | 0 ... 99 | min | 0 | 0 | 0 | 0 | User/Inst | | |
| F7 | Fan ON time per duty cycle. NOTE: Contact the sales office if the application is required for use for more than 100k cycles. | 0 ... 99 | secx10 | 30 | 30 | 30 | 30 | Inst | | |
| F8 | Fan OFF time per duty cycle. NOTE: Contact the sales office if the application is required for use for more than 100k cycles. | 0 ... 99 | secx10 | 30 | 30 | 30 | 30 | Inst | | |
| DOOR MICRO SWITCH | | | | | | | | | | |
| r0 | Enabling of user shutoff upon activation of the door micro switch (door open). 0 = Fan and compressor deactivation; 1 = Fan deactivation. Fan deactivation after time r1 ; 2 = Fan and compressor deactivation. Fan deactivation after time r1 ; 3 = Compressor deactivation; 4 = Fan deactivation after time r4 and compressor deactivation after time r1 ; 5 = Fan and compressor deactivation. Fan reactivation after time r4 and compressor reactivation after time r1 . | 0 ... 5 | num | 0 | 0 | 0 | 0 | Inst | | |
| r1 | Door open alarm activation delay time (with r2 =1). Compressor shutoff (r0 = 1 or 4) / activation (r0 = 2 or 5) delay after door opening / closing. | 0 ... 99 | min | 0 | 0 | 0 | 0 | Inst | | |
| r2 | Enables/disables door open alarm. 0 = Alarm disabled; 1 = Alarm enabled. | 0/1 | flag | 0 | 0 | 0 | 0 | Inst | | |
| r3 | Fan OFF stay time after door closing. | 0 ... 99 | min | 0 | 0 | 0 | 0 | Inst | | |
| r4 | Fan shutoff (r0 = 4) / activation (r0 = 5) delay from door opening / closing. | 0 ... 99 | min | 0 | 0 | 0 | 0 | Inst | | |
| ALARMS | | | | | | | | | | |
| A0 | Parameter A2 and A3 mode understood as absolute temperature value or as a differential with respect to the Setpoint. 0 = Absolute value; 1 = Relative value. | 0/1 | flag | 0 | 0 | 0 | 0 | Inst | | |
| A1 | Alarm activation differential. | 1.0 ... 25.0 | °C/°F | 2.0 | 2.0 | 2.0 | 2.0 | Inst | | |
| A2 | Maximum alarm. Temperature value (understood as the distance from the Setpoint or as an absolute value in function of A0) that when exceeded, causes alarm activation. See ' Max/Min temperature alarms '. | A3 ... 199 | °C/°F | 99.0 | 99.0 | 99.0 | 99.0 | User/Inst | | |
| A3 | Minimum alarm. Temperature value (understood as the distance from the Setpoint or as an absolute value in function of A0) that when undershot, causes alarm activation. See ' Max/Min temperature alarms '. | -58.0 ... A2 | °C/°F | -50.0 | -50.0 | -50.0 | -50.0 | User/Inst | | |
| A4 | Alarm exclusion time when switching on the instrument, after a power outage. Refers only to high (A2) and low (A3) temperature alarms. | 0 ... 99 | minx10 | 0 | 0 | 0 | 0 | Inst | | |

| PAR. | DESCRIPTION | RANGE | M.U. | nEW MODELS | | | | LEVEL |
|---|--|----------------|--------|------------|-----|----------|-----|-----------|
| | | | | 961 | 971 | 971 SPDT | 974 | |
| A5 | Exclusion time for temperature alarms after a thaw cycle. | 0 ... 99 | minx10 | 0 | 0 | 0 | 0 | Inst |
| A6 | Exclusion time high and low temperature alarms after closing the door. | 0 ... 99 | minx10 | 0 | 0 | 0 | 0 | Inst |
| A7 | Temperature alarm signaling delay time. Refers only to high (A2) and low (A3) temperature alarms. | 0 ... 99 | min | 0 | 0 | 0 | 0 | User/Inst |
| A9 | Regulators blocked by external alarm. 0 = Does not block any resource; 1 = Blocks the compressor; 2 = Blocks the compressor and defrosting; 3 = Blocks the compressor, defrosting and fans. | 0/1/2/3 | num | 0 | 0 | 0 | 0 | Inst |
| DISPLAY | | | | | | | | |
| Y0 | Select °C or °F to display the value from the probes (0 = °C, 1 = °F). NOTE: changing from °C to °F or vice versa does NOT change the setpoint, differential values, etc. (example: set=10°C becomes 10°F). | 0/1 | flag | 1 | 1 | 1 | 1 | Inst |
| Y1 | Calibration 1. Positive or negative temperature values that are summed to those read by Pb1 . This sum is used for the displayed temperature as well as for the regulation. | -30.0 ... 30.0 | °C/°F | 0.0 | 0.0 | 0.0 | 0.0 | User/Inst |
| Y2 | Calibration 2. Positive or negative temperature values that are summed to those read by Pb2 . This sum is used for the displayed temperature as well as for the regulation. | -30.0 ... 30.0 | °C/°F | | 0.0 | 0.0 | 0.0 | User/Inst |
| Y3 | Stand-by operating mode. 0 = Display off; the regulators and icons are active and the instrument signals possible alarms by activating the alarm icon; 1 = Display off; the regulators and the alarms are blocked; 2 = The display shows the label 'OF'; the regulators and alarms are blocked. | 0 ... 2 | num | 0 | 0 | 0 | 0 | Inst |
| Y4 | Setpoint change lock. It is still possible to enter parameter programming and change them, including the status of this parameter in order to unlock the keypad. 0 = No; 1 = Yes. | 0/1 | flag | 0 | 0 | 0 | 0 | User/Inst |
| Y5 | Selection of the type of value to show on the display. 0 = Setpoint; 1 = Pb1 probe; 2 = Pb2 probe. | 0/1/2 | num | 1 | 1 | 1 | 1 | Inst |
| Y6 | Display mode during defrosting. 0 = Displays the value selected with y5 (value on the display without changes); 1 = Blocks the reading of the value shown on the display when defrosting is activated and until SP is reached (or until end cycle y7); 2 = Shows dE during defrosting and until SP is reached (or until end cycle y7). | 0/1/2 | num | 2 | 2 | 2 | 2 | User/Inst |
| Y7 | Display unlocking time-out value - label dE . | 0 ... 99 | min | 30 | 30 | 30 | 30 | User/Inst |
| o9 | Display with decimal point. 0 = No (only integers); 1 = Yes (display with decimal). | 0/1 | flag | 1 | 1 | 1 | 1 | Inst |
| Y8 | PAssword 1. When enabled (y8≠0) it represents the access key for the user parameters (User). | 0 ... 99 | num | 0 | 0 | 0 | 0 | User/Inst |
| Y9 | PAssword 2. When enabled (y9≠0) it represents the access key for the installer parameters (Inst). | 0 ... 99 | num | 15 | 15 | 15 | 15 | Inst |
| CONFIGURATION - NOTE: switch the device off and on again each time the parameter configuration is changed. | | | | | | | | |
| i2 | Pb2 input configuration. 0 = Not present; 1 = Analog input (Probe); 2 = Digital input (D.I.). | 0/1/2 | num | | 1 | 1 | 1 | Inst |
| i3 | Digital input 1 configuration. 0 = Disabled; 1 = Reduced set / energy saving; 2 = Defrosting; 3 = Stand-by; 4 = Door micro switch; 5 = Reduced set / AUX; 6 = External alarm; 7 = AUX; 8 = Not used. | 0 ... 8 | num | 0 | 0 | 0 | 0 | Inst |
| i4 | Digital input 2 configuration (only if i2 = 2). Analogous to a i3 . | 0 ... 8 | num | | 0 | 0 | 0 | Inst |
| i5 | Digital input 1 polarity. 0 = NO (active due to open contact); 1 = NC (active due to contact closed). | 0/1 | flag | 0 | 0 | 0 | 0 | Inst |
| i6 | Digital input 2 polarity. 0 = NO (active due to open contact); 1 = NC (active due to contact closed). | 0/1 | flag | | 0 | 0 | 0 | User/Inst |
| i7 | Digital input activation delay. | 0 ... 99 | secx10 | 0 | 0 | 0 | 0 | Inst |

| PAR. | DESCRIPTION | RANGE | M. U. | nEW MODELS | | | | LEVEL |
|------------------|--|-----------|-------|------------|-----|----------|-----|-----------|
| | | | | 961 | 971 | 971 SPDT | 974 | |
| o1 | Digital output 1 configuration. 0 = Disabled; 1 = Compressor; 2 = Defrosting; 3 = Evaporator fans; 4 = AUX; 5 = Alarm; 6 = Stand-by. | 0 ... 6 | num | 1 | 1 | 1 | 1 | Inst |
| o2 | Digital output 2 configuration. Analogous to a o1 . | 0 ... 6 | num | | 2 | | 3 | Inst |
| o3 | Digital output 3 configuration. Analogous to a o1 . | 0 ... 6 | num | | | 2 | 2 | Inst |
| L1 | Association of auxiliary output regulator (AUX). 0 = Not associated; 1 = Associated to the status of the door micro switch. Regulator ON when the digital input is active and regulator OFF when the digital input is deactivated; 2 = Not used. | 0/1/2 | num | | 0 | 0 | 0 | Inst |
| H1 | Configuration of the UP key (see paragraph Key Functions). 0 = Disabled; 1 = Manual defrosting; 2 = Set-point offset / energy saving; 3 = Stand-by; 4 = AUX. | 0 ... 4 | num | 0 | 0 | 0 | 0 | User/Inst |
| H2 | Configuration of the DOWN key (see paragraph Key Functions). 0 = Disabled; 1 = Manual defrosting; 2 = Set-point offset / energy saving; 3 = Stand-by; 4 = AUX. | 0 ... 4 | num | 0 | 0 | 0 | 0 | Inst |
| H3 | Configuration of the ESC key (see paragraph Key Functions). 0 = Disabled; 1 = Manual defrosting; 2 = Set-point offset / energy saving; 3 = Stand-by; 4 = AUX. | 0 ... 4 | num | 0 | 0 | 0 | 0 | User/Inst |
| J1 | Sampling interval for filtering 1. | 1 ... 250 | sec | 1 | 1 | 1 | 1 | Inst |
| J2 | Disable/select temperature filter mode. | 0 ... 7 | num | 0 | 0 | 0 | 0 | Inst |
| Cu | Serial number. | (*) | num | 0 | 0 | 0 | 0 | User/Inst |
| tb | tAble of parameters. Reserved: read only parameter . | / | / | / | / | / | / | User/Inst |
| COPY CARD | | | | | | | | |
| UL | Upload. Transfer of the programming parameters from the instrument to Copy Card. | / | / | / | / | / | / | User/Inst |



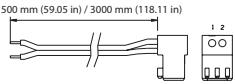
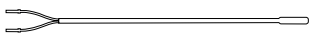
(*) For **nEW 961** models: 0 ... 99; for **nEW 971/971 SPDT/974** models: 0 ... 199.

DEVICE MANAGER

Connection between Device Manager and device can be made using the CopyCard for nEW (optional) only. The communication settings for correct operation are as follows:

- Protocol: **Modbus**
- Speed: **9600**
- Parity: **None**
- Stop Bit: **1 BIT**

ACCESSORIES
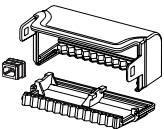
| | |
|---|--|
|  | <p>Rear protection (IP22) The kit includes:</p> <ul style="list-style-type: none"> • protective top cover for the probes and relay outputs • lower cover • protective cap for the CopyCard connector |
|  | <p>CopyCard for nEW The new Copycard for the nEW has the following connectors:</p> <ul style="list-style-type: none"> • edge connector for the connection to the instrument • mini-usb connector for the connection to the power supply (using a network-USB power supply or a USB battery) • TTL connector for the connection to DMI |
|  | <p>Cable for the digital inputs A 1.5 m (4.92 ft) & 3 m (9.84 ft) cable is available with a LUMBERG connector for the connection of the digital inputs.</p> |
|  | <p>NTC probe A 1.5 m (4.92 ft) & 3 m (9.84 ft) NTC probe is available with a point terminal to connect to analog inputs</p> |

RESPONSIBILITY AND RESIDUAL RISKS

ELIWELL CONTROLS SRL is not liable for damage caused by:

- installation/use other than what is intended and, in particular, in deviation from the safety regulations set forth by the standards and/or included in this document;
- use on panels that do not guarantee suitable protection against electrical shock, water and dust in the assembly conditions;
- use on panels that permit access to hazardous parts without the use of tools;
- product tampering and/or alteration;
- installation/use in panels that do not comply with standards and the provisions of current law.

DISCLAIMER

This publication is the exclusive property of ELIWELL CONTROLS SRL, the reproduction and distribution of which is absolutely prohibited unless expressly authorized directly by ELIWELL CONTROLS SRL. This document has been prepared with utmost care; however ELIWELL CONTROLS SRL cannot accept any liability in relation to its use.

The same applies to people or companies involved in the creation and preparation of this manual. ELIWELL CONTROLS SRL reserves the right to make any design or functional change to this document without notice and at any moment.

CONDITIONS OF USE

Permitted use

For purposes of instrument safety, it must be installed and used in accordance with the provided instructions and in particular, in normal conditions, dangerous energized parts must not be accessible. The device must be suitably protected against water and dust based on the application and must also be accessible only with the use a tool (with the exception of the front panel). The device is suited for being integrated in equipment for domestic use and/or similar for refrigeration purposes and has been checked in relation to aspects regarding safety on the basis of the harmonized European standards of reference.

Prohibited use

Any use other than what is permitted is in fact prohibited. Please note that the relay contacts provided are a functional type and are subject to faults: any protective devices indicated by product regulations or suggested as a result of common sense with regard to obvious safety needs must be implemented outside of the instrument.

DISPOSAL

The equipment (or product) must be collected separately in compliance with current regulations on disposal.

U.S. Headquarters:

200 North Martingale Rd
Suite 1000
Schaumburg, IL 60173

www.eliwellusa.com

Technical Customer Support:

T: (855) 574 - 9484

E: techsupport.EliwellUSA@schneider-electric.com

Sales:

T: (855) 574 - 9214

E: EliwellUSA@schneider-electric.com

Eliwell Controls s.r.l.

Via dell'Industria, 15 • Z.I. Paludi
32010 Pieve d'Alpago (BL) - ITALY
T: +39 0437 986 111

F: +39 0437 989 066

www.eliwell.com

Technical Customer Support:

T: +39 0437 986 300

E: Techsuppeliwell@schneider-electric.com

Sales:

T: +39 0437 986 100 (Italy)

T: +39 0437 986 200 (other countries)

E: saleseliwell@schneider-electric.com

MADE IN ITALY

