

eliwell

by Schneider Electric

IDPlus

961/974 SMPS



EN

Electronic controllers for refrigeration units

USER INTERFACE



IDPlus 961 SMPS



IDPlus 974 SMPS

KEYS



UP

Press and release

Scroll menu items
Increases values

Press for at least 5 sec

Activates the Manual Defrost function



DOWN

Press and release

Scroll menu items
Decrease values

Press for at least 5 sec

Function can be configured by the user (par. H32)



STANDBY (ESC)

Press and release

Returns to the previous menu level
Confirms parameter value

Press for at least 5 sec

Activates the Standby function
(when outside the menus)



SET (ENTER)

Press and release

Displays alarms (if active)
Opens Machine Status menu

Press for at least 5 sec

Opens Programming menu
Confirm commands

ICONS



REDUCED SET / ECONOMY

Flashing: economy Setpoint active
 Quick flashing: access to level2 parameters
 Off: otherwise



ALARM

Permanently on: alarm active
 Flashing: alarm acknowledged
 Off: otherwise



COMPRESSOR

Permanently on: compressor active
 Flashing: a delay, a protection or a locked start-up
 Off: otherwise



DEFROST

Permanently on: defrost active
 Flashing: manual or D.I. activation
 Off: otherwise



°C

Permanently on: °C setting (dro = 0)
 Off: otherwise



°F

Permanently on: °F setting (dro = 1)
 Off: otherwise



HEAT STATUS (IDPlus 961 SMPS)

Permanently on: compressor in HEAT
 Off: otherwise



(IDPlus 961 SMPS)

NOT USED



FANS (IDPlus 974 SMPS)

Permanently on Fans active
 Off: otherwise



AUX (IDPlus 974 SMPS)

Permanently on: Aux output active
 Flashing: manual or D.I. activation of Deep Cooling

*** To activate the LOC function:**



- enter the "Basic Commands" menu by pressing the key **set**.
- press keys **ⓘ** and **⏪** **within 2 seconds**.

If the LOC function is **Active** and you try to enter the "Programming" menu, the text LOC appears. If this happens, the parameters are still displayed but cannot be edited. To disable the keypad lock, repeat the aforementioned procedure.





* When switched on, the device performs a Lamp Test; the display and LEDs will flash for several seconds to check that they all function correctly.

MOUNTING - DIMENSIONS

The device is designed for panel mounting. Drill a 29x71 mm hole and insert the instrument; secure it with the special brackets provided. Do not install the instrument in damp and/or dirty places; in fact, it is suitable for use in places with ordinary or normal levels of pollution. Keep the area around the instrument cooling slots adequately ventilated.

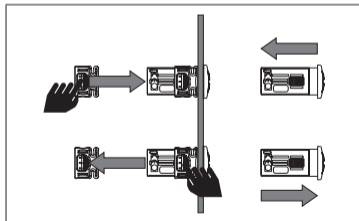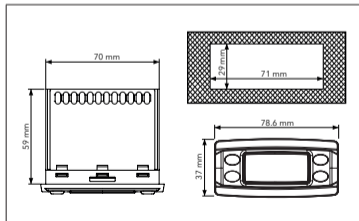

CONNECTIONS

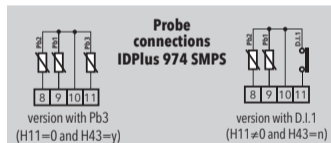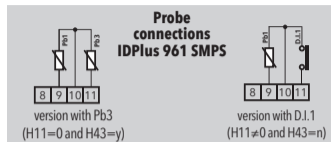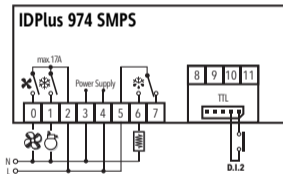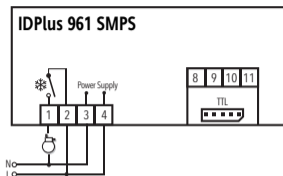

TERMINALS

0-2	Fans relay	⚡ (H23=3) (only IDPlus 974 SMPS)	10-9	Probe Pb1
1-2	Compressor relay	⚙ (H21=1)	10-8	Probe Pb2 (only IDPlus 974 SMPS)
5-6-7	Defrost relay	❄ (H22=2) (only IDPlus 974 SMPS)	10-11	Digital Input 1/ Pb3 probe
N-L	Power supply	100 ... 240 Vac	TTL	TTL Input or Digital Input 2 (only IDPlus 974 SMPS)

LOADING DEFAULT APPLICATIONS

The procedure used to load one of the default applications is:

- when the instrument switches on, press and hold the **set** key: the label 'AP1' will appear;
- scroll through the various applications (**AP1-AP2-AP3-AP4**) using the **⏪** and **⏩** keys;
- select the desired application using the key **set** ('AP3' in the example) or cancel the procedure by pressing the key **⏹**;
- if the operation is successful, the display will show 'y', otherwise 'n' will appear;
- after a few seconds the instrument will return to the main display.



DESCRIPTION OF FAMILY

IDPlus 961/974 SMPS are controllers with

- 1 or many relay output
- 1 or many temperature regulation sensor
- 1 or many multifunctional Digital/Temperature input.

Relay outputs 2 and 3 can be used to control:


- Compressor
- Evaporator fans
- Alarm
- Defrost heating elements
- AUX output
- Stand-by

The Digital input (D.I.) can be used for:


- Energy saving
- External alarm
- Pressure switch
- HACCP alarms
- Door switch
- Defrost activation
- Standby
- Deep-cooling
- AUX management (only 974)

IDPlus 961 SMPS APPLICATIONS


AP1

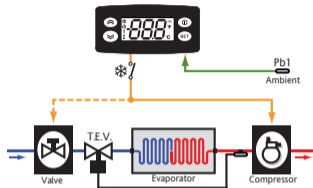


AP2

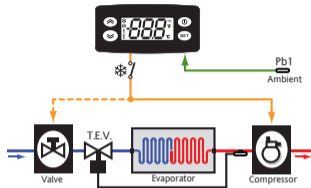

AP3

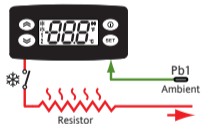

AP4

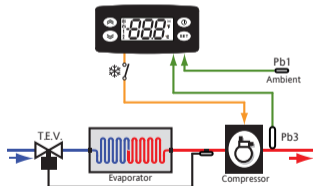

Ambient = Ambient

Evaporator = Evaporator

Resistor = Resistor


Valve = Valve

Compressor = Compressor


T.E.V. = Thermostatic Expansion Valve

IDPlus 974 SMPS APPLICATIONS


AP1

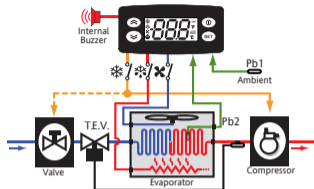


AP2

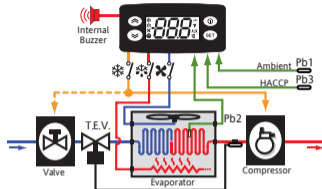

AP3

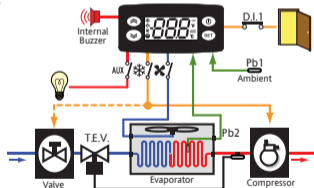

AP4

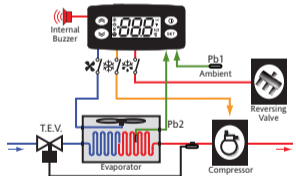

Ambient = Ambient
Evaporator = Evaporator
Compressor = Compressor
Reversing valve = Reversing valve

Valve = Valve
T.E.V. = Thermostatic Expansion Valve
AUX = AUX
Internal Buzzer = Internal Buzzer

TECHNICAL DATA (EN 60730-2-9)

The product complies with the following harmonized Standards: EN 60730-1 and EN 60730-2-9

Construction of control:	Electronic automatic incorporated Control
Purpose of control:	Operating control (non-safety related)
Method of mounting:	Panel mounting with 71x29 mm (2.80x1.14 in.) drilling template
Type of action:	1.B
Pollution degree:	2
Overvoltage category:	II
Rated impulse voltage:	2500 V
Power supply:	SMPS 100 ... 240 Vac ($\pm 10\%$) 50/60 Hz
Power draw (maximum):	4.5 W
Ambient operating conditions:	Temperature: -5...55 °C (23...131 °F) - Humidity: 10...90 % RH (non-condensing)
Transportation and storage conditions:	Temperature: -30...85 °C (-22...185 °F) - Humidity: 10...90 % RH (non-condensing)
Software class:	A
Digital outputs (relay):	refer to the label on the device

NOTE: Check the power supply specified on the instrument label; contact our Sales Office for power supply and relay ratings.

FURTHER INFORMATION

Input Characteristics

Display range:	NTC : -50.0 ... 110 °C; PTC : -55.0 ... 140 °C; PT1000 : -55.0 ... 150 °C (on display with 3 digits + sign)
Accuracy:	NTC, PTC, PT1000 (-55.0 ... 70 °C): Better than 0.5% of full scale +1 digit PT1000 (70.0 ... 150 °C): Better than 0.6 % of full scale +1 digit
Resolution:	0.1 °C
Buzzer:	YES (depending on model)
Analogue inputs:	IDPlus 961 SMPS : 1 NTC (default)/PTC/PT1000 (See parameter H00) IDPlus 974 SMPS : 2 NTC (default)/PTC/PT1000 (See parameter H00)
Digital inputs:	IDPlus 961 SMPS : 1 voltage-free digital input; IDPlus 974 SMPS : 2 voltage-free digital inputs N.B. : - D.I.1 can also be configured as a probe input (H11 =0 and H43 =y) - D.I.2, if activated, should be connected to terminals 1-2 of the TTL (IDPlus 974 SMPS)

Output Characteristics

Digital outputs:

IDPlus 961 SMPS:	1 Compressor relay: UL60730 (A) 2 Hp (12FLA - 72LRA) max 240 Vac UL60730 (A) 1 Hp (16FLA - 96LRA) max 120 Vac
IDPlus 974 SMPS:	1 Defrost relay: NO 8(4) A - NC 6(3) A max 250 Vac 1 Compressor relay: UL60730 (A) 2 Hp (12FLA - 72LRA) max 240 Vac UL60730 (A) 1 Hp (16FLA - 96LRA) max 120 Vac 1 Fans relay: 5(2) A max 250 Vac

Mechanical Characteristics

Dimensions:

front panel 74x32 mm, depth 59 mm (without terminals)

Terminals:

screw/disconnectable terminals for cables with a diameter of 2.5 mm²

Connectors:

TTL for connection of Copy Card + D.I.2 (**IDPlus 974 SMPS** only)

NOTE: The technical specifications given in this document regarding measurement (range, accuracy, resolution, etc.) refer to the instrument and not to any accessories provided, such as the probes.

LOCK SETPOINT MODIFICATION

The keypad can be locked by entering the 'Basic Commands' menu using **set** and pressing **ⓘ** and **⏪** within 2 seconds, or by programming the 'LOC' parameter (see 'diS' folder). If the keypad is locked, the 'Basic Commands' menu can be accessed and the Setpoint displayed, but the value cannot be modified.

MANUAL DEFROST CYCLE ACTIVATION

Hold down the **⏪** key for longer than 5 seconds. It is only activates if the temperature conditions are fulfilled. Otherwise, the display will flash three times to indicate that the operation will not be performed.

INSTRUMENT ON/OFF

The instrument can be switched off by pressing the key **ⓘ** for longer than 5 seconds. In this condition, the adjustment algorithms and defrost cycles are disabled and the text "OFF" will appear on the display.

PASSWORD

Password 'PA1': used to access **User** parameters. The password is not enabled by default (**PA1=0**).

To enable it (**PA1≠0**): press and hold **set** for longer than 5 seconds, scroll through the parameters using **⏪** and **⏩** until you see the label **PS1**, press **set** to display the value, modify it using **⏪** and **⏩** then save it by pressing **set** or **ⓘ**. If enabled, it will be required in order to access the User parameters.

Password 'PA2': used to access **Installer** parameters. The password is enabled by default (**PA2=15**).

To modify it (**PA2≠15**): press **set** and hold for longer than 5 seconds, scroll through the parameters using **⏪** and **⏩** until you see the label **PA2**, press **set**, set the value to '15' using **⏪** and **⏩**, then confirm using **set**. Scroll through the folders until you find the label **diS** and press **set** to enter. Scroll through the parameters using **⏪** and **⏩** until you see the label **PS2**, press **set** to display the value, modify it using **⏪** and **⏩**, then save it by pressing **set** or **ⓘ**.

The visibility of 'PA2' is as follows:

- 1) **PA1 and PA2 ≠ 0**: Press and hold **set** for longer than 5 seconds to display 'PA1' and 'PA2'. It will then be possible to decide whether to access the User (PA1) or the Installer (PA2) parameters.
- 2) **Otherwise**: The password 'PA2' is amongst the level1 parameters. If enabled, it will be required when accessing the Installer parameters; to enter it, proceed as instructed for password "PA1".

If the password entered is incorrect, the label PA1/PA2 will be displayed again and the procedure will need to be repeated.

ACCESSING AND USING THE MENUS

Resources are organised into menus. Press and release the **set** key to access the 'Machine Status' menu.

To access the 'Programming' menu, press the **set** key for more than 5 seconds. If no keys are pressed for over 15 seconds (Timeout), or if the **ⓘ** key is pressed, the last value to appear on the display is confirmed.

USING THE COPY CARD

The Copy Card is connected to the serial port (TTL) and allows rapid programming of the instrument parameters. Access **Installer** parameters by entering 'PA2', scroll through the folders using **⏪** and **⏩** until folder **FPr** appears. Select it using **set**, scroll through the parameters using **⏪** and **⏩**, then select the function using **set** (e.g. **UL**).

- **Upload (UL):** Select UL and press **set**. This function uploads the programming parameters from the instrument to the card. If the procedure is a success, 'y', will appear on the display, otherwise 'n' will appear.
- **Format (Fr):** This command is used to format the copy card, (recommended when using the card for the first time).
Important: the **Fr** parameter deletes all data present. This operation cannot be cancelled.
- **Download:** Connect the Copy Card when the instrument is switched off. At power-on, data is downloaded from the copy card to the device automatically. At the end of the lamp test, the display will show '**dLy**' if the operation was successful and '**dLn**' if not.

NOTE: After downloading, the instrument works with the settings of the new map just downloaded.

PROGRAMMING MENU

To access the 'Programming' menu, press the **set** key for more than 5 seconds. If specified, an access PASSWORD will be requested: '**PA1**' for User parameters and '**PA2**' for Installer parameters (see 'PASSWORD' paragraph).

User parameters: When accessed, the display will show the first parameter (e.g. '**diF**'). Press **⏪** and **⏩** to scroll through all the parameters on the current level. Select the desired parameter by pressing **set**. Press **⏪** and **⏩** to modify it and **set** to save the changes.

Installer parameters: When accessed, the display will show the first folder (e.g. '**CP**'). Press **⏪** and **⏩** to scroll through the folders on the current level. Select the desired folder using **set**. Press **⏪** and **⏩** to scroll through the parameters in the current folder and select the parameter using **set**. Press **⏪** and **⏩** to modify it and **set** to save the changes.

NOTE: Switch the device off and on again each time the parameter configuration is changed.

ALARMS


Label	Description	Cause	Effects	Remedy
E1	Probe1 in error (Cold room)	<ul style="list-style-type: none"> measured values are outside operating range Probe inoperable/short-circuited/open 	<ul style="list-style-type: none"> Display label E1 Alarm icon permanently on Disable max/min alarm controller Compressor operation based on parameters 'Ont' and 'OFt'. 	<ul style="list-style-type: none"> check probe type (par. H00) check probe wiring replace probe
E2	Probe2 in error (Defrost) only on IDPlus 974 SMPS	<ul style="list-style-type: none"> measured values are outside operating range Probe inoperable/short-circuited/open 	<ul style="list-style-type: none"> Display label E2 Alarm icon permanently on The Defrost will end due to Timeout (dEt) The evaporator fans will be: ON if the compressor is ON, in accordance with the FCO parameter if the compressor is OFF 	<ul style="list-style-type: none"> check probe type (par. H00) check probe wiring replace probe
E3	Probe3 in error	<ul style="list-style-type: none"> measured values are outside operating range Probe inoperable/short-circuited/open 	<ul style="list-style-type: none"> Display label E3 Alarm icon permanently on 	<ul style="list-style-type: none"> check probe type (par. H00) check probe wiring replace probe
AH1	Alarm for HIGH Pb1 temperature	Value read by Pb1 > HAL after time of taO (see "MAX/MIN TEMP. ALARMS)	<ul style="list-style-type: none"> Recording of label AH1 in folder AL No effect on regulation 	Wait until value read by Pb1 returns below HAL
AL1	Alarm for LOW Pb1 temperature	Value read by Pb1 < LAL after time of taO (see "MAX/MIN TEMP. ALARMS)	<ul style="list-style-type: none"> Recording of label AL1 in folder AL No effect on regulation 	Wait until value read by Pb1 returns above LAL
EA	External alarm	Digital input activated (H11 = ±5)	<ul style="list-style-type: none"> Recording of label EA in folder AL Alarm icon permanently on Regulation locked if rLO = y 	Check and remove the external cause which triggered the alarm on the D.I.
OPd	Door open alarm	Digital input activation (H11 = ±4) (for longer than tdO)	<ul style="list-style-type: none"> Recording of label Opd in folder AL Alarm icon permanently on Controller locked 	<ul style="list-style-type: none"> close the door delay function defined by OAO
Ad2	Defrost due to timeout	End of defrost cycle due to timeout rather than due to defrost end temperature being recorded by Pb2	<ul style="list-style-type: none"> Recording of label Ad2 in folder AL Alarm icon permanently on 	Wait for the next defrost cycle for automatic return

Label	Description	Cause	Effects	Remedy
COH	Over Heating alarm	Pb3 value set by parameter SA3 exceeded	<ul style="list-style-type: none"> Recording of label COH in folder AL Alarm icon permanently on Regulation locked (Compressor) 	Wait for the temperature to return to a value of (SA3-dA3).
nPA	General pressure switch alarm	Activation of pressure alarm by general pressure switch	<p>If the number N of pressure switch activations is: N < PEn:</p> <ul style="list-style-type: none"> Recording of folder nPA in folder AL, with the number of pressure switch activations Regulation locked (Compressor and Fans) 	Check and remove the cause which triggered the alarm on the D.I. (Automatic Reset)
PAL	General pressure switch alarm	Activation of pressure alarm by general pressure switch	<p>If the number N of pressure switch activations is: N = PEn:</p> <ul style="list-style-type: none"> Display label PAL Recording of label PA in folder AL Alarm LED steady Regulation locked (Compressor and Fans) 	<ul style="list-style-type: none"> Switch the device off and back on again Reset alarms by entering the functions folder and selecting the rAP function (Manual Reset)
HC n	Max/Min Pb3 value when out of range (SLH...SHH)	Logs the Max/Min value recorded by Pb3 when it exceeds range SLH...SHH. n represents the sequential number of times the range is exceeded.	<ul style="list-style-type: none"> Recording of folder 'HC n' in folder AL Alarm LED steady No effect on regulation 	NB: n can assume the values 1 to 8. If n >8, folder HC8 will flash and the system will overwrite folders where n =1
tC n	Pb3 out-of-range dwell time (SLH...SHH)	Stores the dwell time of the Pb3 value outside range SLH...SHH. n represents the sequential number of times the range is exceeded.	<ul style="list-style-type: none"> Recording of folder 'tC n' in folder AL Alarm LED steady No effect on regulation 	NB: n can assume the values 1 to 8. If n >8, folder HC8 will flash and the system will overwrite folders where n =1
bC n	Value recorded by Pb3 on return from bOt	Logs the value recorded by Pb3 on return from a blackout. n represents the sequential number of blackouts that have occurred.	<ul style="list-style-type: none"> Recording of folder 'bC n' in folder AL No effect on regulation 	NB: n can assume the values 1 to 8. If n >8, folder bC8 will flash and the system will overwrite folders where n =1
bt n	Pb3 out-of-range dwell time during bOt	Stores the out-of-range dwell time of the Pb3 value during a blackout. n represents the sequential number of blackouts that have occurred.	<ul style="list-style-type: none"> Recording of folder 'bt n' in folder AL. The value contained will be 0 if the value of Pb3 has remained within the range, ≠ 0 if the value has gone outside of the range No effect on regulation 	N.B.: n can assume the values 1 to 8. If n >8, folder bC8 will flash and the system will overwrite folders where n =1.


NOTE: to delete folders "HC n", "tC n", "bC n" and "bt n" from folder AL, start function **rES** in folder FnC.

MAX/MIN TEMPERATURE ALARMS

Temperature as a value relative to Setpoint (Att=1)

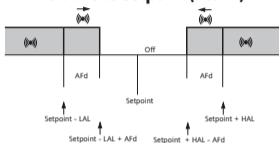

Temperature as an Absolute value (Att=0)



Minimum alarm

Temp. \leq **Set + LAL ***

Temp. \leq **LAL (LAL with sign)**

Maximum alarm

Temp. \geq **Set + HAL ****

Temp. \geq **HAL (HAL with sign)**

Returning from minimum temperature alarm

Temp. \geq **Set + LAL + AFd** or
 \geq **Set - |LAL| + AFd (LAL < 0)**

Temp. \geq **LAL + AFd**

Returning from maximum temperature alarm

Temp. \leq **Set + HAL - AFd (HAL > 0)**

Temp. \leq **HAL - AFd**

***** if LAL is negative, **Set + LAL < Set**

****** if HAL is negative, **Set + HAL < Set**

DIAGNOSTICS

Alarms are always indicated by the buzzer (if present) and the alarm icon (🔔).

To switch off the buzzer, press and release any key; the corresponding icon will continue to flash.

N.B.: If alarm exclusion times have been set (see 'AL' folder) the alarm will not be signalled.

In the event of an alarm caused by the ambient probe (Pb1) in error, the indication '**E1**' will appear on the display.

For the evaporator probe (Pb2) in error, the indication '**E2**' will appear (**IDPlus 974 SMPS** only).

Finally, for a Pb3 probe in error, the indication '**E3**' will appear on the display.

MACHINE STATUS MENU

Access the Machine Status menu by pressing **set** and releasing the key. If no alarms are active, the 'SEt' label appears. Use the keys **⏪** and **⏩** to scroll through all the folders in the menu:



- AL: alarms folder (**only visible if an alarm is active**);
- SEt: Setpoint setting folder;
- Pb1: probe 1 - Pb1 folder;
- Pb2: probe 2 - Pb2* folder (**Only IDPlus 974 SMPS**);
- Pb3: probe 3 - Pb3** folder;

* folder displayed if Pb2 present (H42 = y)

** folder displayed if Pb3 present (H11 = 0 and H43 = y)

Setting the Setpoint:

To display the Setpoint value press the **set** key when the 'SEt' label is displayed.

The Setpoint value appears on the display. To change the Setpoint value, press the **⏪** and **⏩** keys within 15 seconds. Press **set** to confirm the modification.

Displaying the probes:

When labels Pb1, Pb2 or Pb3 are present, press the **set** key to view the value measured by the corresponding probe (**NOTE**: the value cannot be modified).

ELECTRICAL CONNECTIONS

Attention! Make sure the machine is switched off before working on the electrical connections.

The instrument is equipped with screw or disconnectable terminal blocks for connecting electrical cables with a max. diameter of 2.5 mm² (one wire per terminal for power connections): for the terminal ratings, see the label on the instrument. Do not exceed the maximum permissible current; in case of higher loads, use a suitably rated contactor. Make sure the power supply voltage complies with that required by the instrument. Probes have no connection polarity and can be extended using a normal bipolar cable (note that the extension of the probes influences the electromagnetic compatibility - EMC - of the instrument: take great care with the wiring).

Probe cables, power supply cables and the TTL serial cable should be routed separately from power cables.

PARAMETERS TABLE OF IDPLUS 961 SMPS

PAR.	DESCRIPTION	RANGE	AP1	AP2	AP3	AP4	M.U.	LEV.
SEt	Temperature control SEtpoint. COMPRESSOR ('CP' folder)	LSE ... HSE	0,0	0,0	0,0	-2,0	°C/°F	1/2
diF	differential. Compressor relay activation differential.	0,1...30,0	2,0	2,0	2,0	0,1	°C/°F	1/2
HSE	Higher SEt. Maximum value that can be assigned to the Setpoint.	LSE...302	99,0	140	140	5,0	°C/°F	1/2
LSE	Lower SEt. Minimum value that can be assigned to the Setpoint.	-58,0...HSE	-50,0	-55,0	-55,0	-10,0	°C/°F	1/2
OSP	Temperature value to be added to SEt if reduced set enabled (Economy function).	-30,0...30,0	3,0	3,0	0,0	0,0	°C/°F	2
Hc	Control mode. C (0) = Cold; H (1) = Hot.	C/H	C	C	H	C	flag	2
Ont	Controller on time for faulty probe. if Ont = 1 and OFt = 0, the compressor remains on; if Ont = 1 and OFt > 0 it runs in duty cycle mode.	0 ... 250	0	0	0	0	min	2
OFt	Controller off time for faulty probe. if OFt = 1 and Ont = 0, the controller remains off; if OFt = 1 and Ont > 0, it operates in duty cycle mode.	0 ... 250	1	1	1	1	min	2
dOn	Compressor relay activation delay after request.	0 ... 250	0	0	0	0	s	2
dOF	Delay after switching off and subsequent activation.	0 ... 250	0	0	0	0	min	2
dbi	Delay between two consecutive compressor activations.	0 ... 250	0	0	0	0	min	2
OdO	Delay in activating outputs after the instrument is switched on or after a power failure. O = not active.	0 ... 250	0	0	0	0	min	2
dcS	Deep Cooling cycle Setpoint.	-58,0...302	0,0	0,0	0,0	0,0	°C/°F	2
tdc	Deep Cooling cycle duration.	0 ... 255	0	0	0	0	min*10	2
dcc	Defrost activation delay after a Deep Cooling cycle.	0 ... 255	0	0	0	0	min	2
DEFROST ('dEF' folder)								
dit	Interval between the start of two consecutive defrost cycles.	0 ... 250	6	0	0	8	hours	1/2
dCt	Selection of count mode for the defrost interval. 0 = compressor running time; 1 = appliance running time; 2 = A defrost cycle is run at each compressor stop.	0/1/2	1	1	1	1	num	2
dOH	Delay for start of first defrost after request.	0 ... 59	0	0	0	0	min	2
dEt	Defrost timeout; determines the maximum defrost duration.	1 ... 250	30	1	1	30	min	1/2

PAR.	DESCRIPTION	RANGE	AP1	AP2	AP3	AP4	M.U.	LEV.
dPO	Determines whether the instrument must enter defrost mode at start-up.	n/y	n	n	n	n	flag	2
ALARMS ('AL' folder)								
Att	Can be used to select absolute (Att=0) or relative (Att=1) values for HAL and LAL parameters.	0/1	0	0	0	0	num	2
Afd	Alarm differential.	1,0 ... 50,0	2,0	2,0	2,0	2,0	°C/°F	2
HAL	Maximum temperature alarm.	LAL...302	50,0	150	150	50,0	°C/°F	1/2
LAL	Minimum temperature alarm.	-58,0...HAL	-50,0	-50,0	-50,0	-50,0	°C/°F	1/2
PAO	Alarm exclusion time after re-activation following a power failure.	0 ... 10	0	0	0	0	hours	2
dAO	Temperature alarm exclusion time after defrost.	0 ... 999	0	0	0	0	min	2
OA0	Alarm signalling delay after disabling of digital input.	0 ... 10	0	0	0	0	hours	2
tdO	Delay in door open alarm activation.	0 ... 250	0	0	0	0	min	2
tAO	Time delay for temperature alarm indication.	0 ... 250	0	0	0	0	min	2
rLO	An external alarm locks the controllers. n (0) = does not lock; y (1)= locks.	n/y	n	n	n	n	flag	2
SA3	Probe 3 alarm Setpoint.	-58,0...302	0,0	0,0	0,0	70,0	°C/°F	1/2
dA3	Probe 3 alarm differential.	1,0 ... 50,0	1,0	1,0	1,0	10,0	°C/°F	2
LIGHTS & DIGITAL INPUTS ('Lit' folder)								
dOd	Digital input for switching off utilities. 0 = disabled; 1 = disables fans; 2 = disables the compressor; 3 = disables fans and compressor.	0/1/2/3	0	0	0	0	num	2
dAd	Activation delay for digital input.	0 ... 255	0	0	0	0	min	2
dCO	Compressor deactivation delay after door opened.	0 ... 255	1	1	1	1	min	2
PRESSURE SWITCH ('PrE' folder)								
Pen	Number of errors allowed per maximum/minimum pressure switch input.	0 ... 15	0	0	0	0	num	2
PEI	Minimum/maximum pressure switch error count interval.	1 ... 99	1	1	1	1	min	2
PEt	Delay in activating compressor after pressure switch deactivation.	0 ... 255	0	0	0	0	min	2
COMMUNICATION ('Add' folder)								
PtS	Communication protocol selection. t (0) = Televis; d (1) = Modbus.	t/d	t	t	t	t	flag	2
dEA	Index of the device inside the family (valid values from 0 to 14).	0 ... 14	0	0	0	0	num	2
FAA	Device family - valid values from 0 to 14.	0 ... 14	0	0	0	0	num	2

PAR.	DESCRIPTION	RANGE	AP1	AP2	AP3	AP4	M.U.	LEV.
Pty	Modbus parity bit. n (0) = none; E (1) = even; o (2) = odd.	n/E/o	n	n	n	n	num	2
StP	Modbus stop bit. 1b (0) = 1 bit; 2b (1) = 2 bit.	1b/2b	1b	1b	1b	1b	flag	2
DISPLAY ('diS' folder)								
LOC	Basic commands modification lock. It is still possible to enter parameter programming mode and modify them. n (0) = no; y (1) = yes.	n/y	n	n	n	n	flag	1/2
PS1	PAssword1: if PS1≠0 is the access key to 'User' parameters.	0 ... 250	0	0	0	0	num	1/2
PS2	PAssword2: if PS2≠0 is the access key to 'Installer' parameters.	0 ... 250	15	15	15	15	num	2
ndt	Display with decimal point. n (0) = no. y (1) = yes.	n/y	y	y	y	y	flag	2
CA1	Calibration 1. Temperature value to be added to the Pb1 value.	-12,0...12,0	0,0	0,0	0,0	0,0	°C/°F	1/2
CA3	Calibration 3. Temperature value to be added to the Pb3 value.	-12,0...12,0	0,0	0,0	0,0	0,0	°C/°F	1/2
ddl	Display mode during defrost. 0 = display temperature recorded by Pb1; 1 = lock recorded Pb1 value at the start of the defrost cycle; 2 = display the 'dEF' label.	0/1/2	0	0	0	0	num	1/2
Ldd	Timeout value for display unlock - dEF label.	0 ... 255	30	30	30	30	min	1/2
dro	Select the measurement unit used when displaying the temperature. (0 =°C, 1 =°F). NOTE: switching between °C and °F or vice-versa DOES NOT modify the SET, diF values, etc. (e.g. Setpoint=10°C becomes 10°F).	0/1	0	0	0	0	flag	2
ddd	Selects type of value to display. 0 = Setpoint; 1 = probe Pb1; 2 = probe Pb2; 3 = probe Pb3.	0/1/2/3	1	1	1	1	num	2
HACCP ('HCP' folder)								
SHH	Maximum HACCP alarm signals threshold.	-55,0...150	0,0	0,0	0,0	0,0	°C/°F	2
SLH	Minimum HACCP alarm signals threshold.	-55,0...150	0,0	0,0	0,0	0,0	°C/°F	2
drA	Minimum time spent in critical range for the event to be recorded. After this a HACCP alarm will be triggered and logged.	0 ... 99	0	0	0	0	min	2
drH	HACCP alarm reset time after last reset.	0 ... 250	0	0	0	0	hours	2
H50	Enable HACCP and alarm relay functions. 0 = HACCP alarms NOT enabled; 1 = HACCP alarms enabled and alarm relay NOT enabled; 2 = HACCP alarms enabled and alarm relay enabled.	0/1/2	0	0	0	0	num	2
H51	HACCP alarm exclusion time.	0 ... 250	0	0	0	0	min	2

PAR.	DESCRIPTION	RANGE	AP1	AP2	AP3	AP4	M.U.	LEV.
CONFIGURATION ('CnF' folder) ➡ If one or more parameters in this folder are changed, the controller MUST be turn off and back on.								
H00	Probe type selection. 0 = PTC; 1 = NTC; 2 = PT1000.	0/1/2	1	1	1	1	num	2
H11	Configuration of digital input 1/polarity. 0 = disabled; ±1 = defrost; ±2 = economy Setpoint; ±3 = AUX; ±4 = door switch; ±5 = external alarm; ±6 = Standby; ±7 = pressure switch; ±8 = Deep Cooling; ±9 = disable HACCP alarm logging. NOTE: • the "+" sign indicates that the input is active if the contact is closed. • the "-" sign indicates that the input is active if the contact is open.	-9 ... +9	0	0	0	0	num	2
H21	Configurability of digital output 1 (※). 0 = disabled; 1 = compressor; 2 = defrost; 3 = fans; 4 = alarm; 5 = AUX; 6 = stand-by.	0 ... 6	1	1	1	1	num	2
H31	Configurability of UP key. 0 = disabled; 1 = defrost; 2 = not used; 3 = economy Setpoint; 4 = stand-by; 5 = reset HACCP alarms; 6 = disable HACCP alarms; 7 = deep Cooling.	0 ... 7	1	0	0	1	num	2
H32	Configurability of DOWN key. Same as H31.	0 ... 7	0	0	0	0	num	2
H43	Probe Pb3 present. n (0) = not present; y (1) = present.	n/y	n	n	n	y	flag	1/2
reL	Device version. Read-only parameter.	/	/	/	/	/	/	1/2
tAb	tAble of parameters. Reserved: read-only parameter.	/	/	/	/	/	/	1/2
COPY CARD ('FPr' folder)								
UL	Programming parameter transfer from instrument to Copy Card.	/	/	/	/	/	/	2
Fr	Format Copy Card. Erase all data contained in the Copy Card. NOTE: if parameter "Fr" is used, the data entered will be permanently lost. This operation cannot be cancelled.	/	/	/	/	/	/	2
FUNCTIONS ('FnC' folder)								
rAP	Reset pressure switch alarms.	/	/	/	/	/	/	2
rES	Reset HACCP alarms.	/	/	/	/	/	/	2

PARAMETERS TABLE OF IDPLUS 974 SMPs

PAR.	DESCRIPTION	RANGE	AP1	AP2	AP3	AP4	M.U.	LEV.
SEt	Temperature control SEtpoint. COMPRESSOR ('CP' folder)	LSE ... HSE	0,0	0,0	0,0	0,0	°C/°F	1/2
diF	differential. Compressor relay activation differential.	0,1...30,0	2,0	2,0	2,0	2,0	°C/°F	1/2
HSE	Higher SEt. Maximum value that can be assigned to the Setpoint.	LSE...302	99,0	99,0	99,0	99,0	°C/°F	1/2
LSE	Lower SEt. Minimum value that can be assigned to the Setpoint.	-58,0...HSE	-50,0	-50,0	-50,0	-50,0	°C/°F	1/2
OSP	Temperature value to be added to SEt if reduced set enabled (Economy function).	-30,0...30,0	3,0	0,0	0,0	3,0	°C/°F	2
Hc	Control mode. C (0) = Cold; H (1) = Hot.	C/H	C	C	C	C	flag	2
Ont	Controller on time for faulty probe. If Ont = 1 and Oft = 0 , the compressor remains on; if Ont=1 and Oft>0 it runs in duty cycle mode	0 ... 250	0	0	0	0	min	2
Oft	Controller off time for faulty probe. If Oft = 1 and Ont = 0 , the controller remains off; if Oft = 1 and Ont>0 , it operates in duty cycle mode	0 ... 250	1	1	1	1	min	2
dOn	Compressor relay activation delay after request	0 ... 250	0	0	0	0	s	2
dOF	Delay after switching off and subsequent activation	0 ... 250	0	0	0	0	min	2
dbi	Delay between two consecutive compressor activations	0 ... 250	0	0	0	0	min	2
OdO	Delay in activating outputs after the instrument is switched on or after a power failure. O = not active.	0 ... 250	0	0	0	0	min	2
dcS	Deep Cooling cycle Setpoint.	-58,0...302	0,0	0,0	0,0	0,0	°C/°F	2
tdc	Deep Cooling cycle duration.	0 ... 255	0	0	0	0	min*10	2
dcc	Defrost activation delay after a Deep Cooling cycle.	0 ... 255	0	0	0	0	min	2
DEFROST ('DEF' folder)								
dtY	Type of defrost. 0 = electrical defrost; 1 = reverse cycle defrost; 2 = defrost independent of compressor.	0/1/2	0	0	0	1	num	1/2
dit	Interval between the start of two consecutive defrost cycles.	0 ... 250	6	6	6	6	hours	1/2
dCt	Selection of count mode for the defrost interval. 0 = compressor running time; 1 = appliance running time; 2 = A defrost cycle is run at each compressor stop.	0/1/2	1	1	1	1	num	2

PAR.	DESCRIPTION	RANGE	AP1	AP2	AP3	AP4	M.U.	LEV.
dOH	Delay for start of first defrost after request.	0 ... 59	0	0	0	0	min	2
dEt	Defrost timeout; determines the maximum defrost duration.	1 ... 250	30	30	30	30	min	1/2
dSt	Defrost end temperature - determined by probe Pb2.	-50,0... 150	8,0	8,0	8,0	50,0	°C/°F	1/2
dPO	Determines whether the instrument must enter defrost mode at start-up.	n/y	n	n	n	n	flag	2
FANS ('FAn' folder)								
FSt	Fans stop temperature.	-58,0...302	50,0	50,0	50,0	50,0	°C/°F	1/2
FAd	Fan activation differential.	1,0 ... 50,0	2,0	2,0	2,0	2,0	°C/°F	2
Fdt	Fan activation delay after a defrost cycle.	0 ... 250	0	0	0	0	min	1/2
dt	Coil drainage time.	0 ... 250	0	0	0	0	min	1/2
dFd	Allows evaporator fan exclusion to be selected or not selected during defrosting. n (0) = no (it depends on FCO parameter); y (1) = yes (fans excluded).	n/y	y	y	y	y	flag	1/2
FCO	Selects or deselects fan deactivation at compressor OFF. 0 = fans off; 1 = fans active; 2 = duty cycle.	0/1/2	0	0	0	0	num	2
FOn	Fans ON time in day duty cycle.	0 ... 99	0	0	0	0	min	2
FOF	Fans OFF time in day duty cycle.	0 ... 99	0	0	0	0	min	2
Fnn	Fans ON time in night duty cycle.	0 ... 99	0	0	0	0	min	2
FnF	Fans OFF time in night duty cycle.	0 ... 99	0	0	0	0	min	2
ESF	Night mode activation. n (0) = no; y (1) = yes.	n/y	n	n	n	n	flag	2
ALARMS ('AL' folder)								
Att	Can be used to select absolute (Att=0) or relative (Att=1) values for HAL and LAL parameters.	0/1	0	0	0	0	num	2
Afd	Alarm differential.	1,0 ... 50,0	2,0	2,0	2,0	2,0	°C/°F	2
HAL	Maximum temperature alarm.	LAL...302	50,0	50,0	50,0	50,0	°C/°F	1/2
LAL	Minimum temperature alarm.	-58,0...HAL	-50,0	-50,0	-50,0	-50,0	°C/°F	1/2
PAO	Alarm exclusion time after re-activation following a power failure.	0 ... 10	0	0	0	0	hours	2
dAO	Temperature alarm exclusion time after defrost.	0 ... 999	0	0	0	0	min	2
OAO	Alarm signalling delay after disabling of digital input.	0 ... 10	0	0	0	0	hours	2
tdO	Delay in door open alarm activation.	0 ... 250	0	0	0	0	min	2

PAR.	DESCRIPTION	RANGE	AP1	AP2	AP3	AP4	M.U.	LEV.
tAO	Time delay for temperature alarm indication.	0 ... 250	0	0	0	0	min	2
dAt	Alarm signalling end of defrost due to timeout. n (0) = no; y (1) = yes.	n/y	n	n	n	n	flag	2
rLO	External alarm locks controllers. n (0) = does not lock; y (1) = locks.	n/y	n	n	n	n	flag	2
SA3	Probe 3 alarm Setpoint.	-58,0...302	0,0	0,0	0,0	0,0	°C/°F	2
dA3	Probe 3 alarm differential.	1,0 ... 50,0	1,0	1,0	1,0	1,0	°C/°F	2
LIGHTS & DIGITAL INPUTS ('Lit' folder)								
dOd	Digital input for switching off utilities. 0 =disabled; 1 =disables fans; 2 =disables the compressor; 3 =disables fans and compressor.	0/1/2/3	0	0	0	0	num	2
dAd	Activation delay for digital input.	0 ... 255	0	0	0	0	min	2
dCO	Compressor deactivation delay after door opened.	0 ... 255	1	1	1	1	min	2
AuP	Aux output activation when door opened. n (0) = not linked; y (1) = linked.	n/y	n	n	y	n	flag	2
PRESSURE SWITCH ('PrE' folder)								
Pen	Number of errors allowed per maximum/minimum pressure switch input.	0 ... 15	0	0	0	0	num	2
PEI	Minimum/maximum pressure switch error count interval.	1 ... 99	1	1	1	1	min	2
PEt	Delay in activating compressor after pressure switch deactivation.	0 ... 255	0	0	0	0	min	2
COMMUNICATION ('Add' folder)								
PtS	Communication protocol selection. t (0) = Televis; d (1) = Modbus.	t/d	t	t	t	t	flag	2
dEA	Index of the device inside the family (valid values from 0 to 14).	0 ... 14	0	0	0	0	num	2
FAA	Device family - valid values from 0 to 14.	0 ... 14	0	0	0	0	num	2
Pty	Modbus parity bit. n (0) = none; E (1) = even; o (2) = odd.	n/E/o	n	n	n	n	num	2
StP	Modbus stop bit. 1b (0) = 1 bit; 2b (1) = 2 bit.	1b/2b	1b	1b	1b	1b	flag	2
DISPLAY ('dis' folder)								
LOC	Basic commands modification lock. It is still possible to enter parameter programming mode and modify them. n (0) = no; y (1) = yes.	n/y	n	n	n	n	flag	1/2
PS1	PAssword1: if PS1≠0 is the access key to User parameters.	0 ... 250	0	0	0	0	num	1/2
PS2	PAssword2: if PS2≠0 is the access key to Installer parameters.	0 ... 250	15	15	15	15	num	2
ndt	Display with decimal point. n (0) = no; y (1) = yes.	n/y	y	y	y	y	flag	2
CA1	Calibration 1. Temperature value to be added to the Pb1 value.	-12,0...12,0	0,0	0,0	0,0	0,0	°C/°F	1/2

PAR.	DESCRIPTION	RANGE	AP1	AP2	AP3	AP4	M.U.	LEV.
CA2	Calibration 2. Temperature value to be added to the Pb2 value	-12,0...12,0	0,0	0,0	0,0	0,0	°C/°F	1/2
CA3	Calibration 3. Temperature value to be added to the Pb3 value	-12,0...12,0	0,0	0,0	0,0	0,0	°C/°F	1/2
ddl	Display mode during defrost. 0 = display the temperature recorded by Pb1; 1 = lock recorded value of Pb1 at defrost start; 2 = display the "dEF" label	0/1/2	0	0	0	0	num	1/2
Ldd	Timeout value for display unlock - dEF label	0 ... 255	30	30	30	30	min	1/2
dro	Select the measurement unit used when displaying the temperature. (0 =°C, 1 =°F). NOTE: switching between °C and °F or vice-versa DOES NOT modify the Set, diF values, etc. (e.g. Setpoint=10°C becomes 10°F).	0/1	0	0	0	0	flag	2
ddd	Selects the type of value to display. 0 = Setpoint; 1 = probe Pb1; 2 = probe Pb2; 3 = probe Pb3.	0/1/2/3	1	1	1	1	num	2
HACCP ('HCP' folder)								
SHH	Maximum HACCP alarm signals threshold.	-55,0...150	0	10	0	0	°C/°F	1/2
SLH	Minimum HACCP alarm signals threshold.	-55,0...150	0	-10	0	0	°C/°F	1/2
drA	Minimum time spent in critical range for the event to be recorded. After this a HACCP alarm will be triggered and logged.	0 ... 99	0	10	0	0	min	1/2
drH	HACCP alarm reset time after last reset.	0 ... 250	0	24	0	0	hours	1/2
H50	Enable HACCP and alarm relay functions. 0 = HACCP alarms NOT enabled; 1 = HACCP alarms enabled and alarm relay NOT enabled; 2 = HACCP alarms enabled and alarm relay enabled.	0/1/2	0	1	0	0	num	1/2
H51	HACCP alarm exclusion time.	0 ... 250	0	0	0	0	min	1/2
CONFIGURATION ('CnF' folder) ➔ If one or more parameters in this folder are changed, the controller MUST be turn off and back on.								
H00	Probe type selection. 0 = PTC; 1 = NTC; 2 = PT1000.	0/1/2	1	1	1	1	num	2
H11	Configuration of digital input 1/polarity. 0 = disabled; ±1 = defrost; ±2 = economy Setpoint; ±3 = AUX; ±4 = door switch; ±5 = external alarm; ±6 = Standby; ±7 = pressure switch; ±8 = Deep Cooling; ±9 = disable HACCP alarm logging. NOTE: • the "+" sign indicates that the input is active if the contact is closed. • the "-" sign indicates that the input is active if the contact is open.	-9 ... +9	0	0	4	0	num	2

PAR.	DESCRIPTION	RANGE	AP1	AP2	AP3	AP4	M.U.	LEV.
H12	Configuration of digital input 2/polarity. Same as H11.	-9 ... +9	0	0	0	0	num	2
H21	Configurability of digital output 1 (✳). 0 = disabled; 1 = compressor; 2 = defrost; 3 = fans; 4 = alarm; 5 = AUX; 6 = Standby.	0 ... 6	1	1	1	1	num	2
H22	Configurability of digital output 2 (✳). Same as H21.	0 ... 6	2	2	5	2	num	2
H23	Configurability of digital output 3 (✳). Same as H21.	0 ... 6	3	3	3	3	num	2
H25	Enable/Disable buzzer. 0 = Disabled; 4 = Enabled; 1-2-3-5-6-7-8 = not used.	0 ... 8	0	0	0	0	num	2
H31	Configurability of UP key. 0 = disabled; 1 = defrost; 2 = AUX; 3 = economy Setpoint; 4 = Standby; 5 = reset HACCP alarms; 6 = disable HACCP alarms; 7 = Deep Cooling.	0 ... 7	1	1	1	1	num	2
H32	Configurability of DOWN key. Same as H31	0 ... 7	0	0	0	0	num	2
H42	Evaporator probe present. n (0) = not present; y (1) = present.	n/y	y	y	y	y	flag	1/2
H43	Probe 3 present. n (0) = not present; y (1) = present.	n/y	n	y	n	n	flag	1/2
rEL	Device version. Read-only parameter.	/	/	/	/	/	/	1/2
tAb	tAble of parameters. Reserved: read-only parameter.	/	/	/	/	/	/	1/2
COPY CARD ('FP' folder)								
UL	Programming parameter transfer from instrument to Copy Card .	/	/	/	/	/	/	2
Fr	Format Copy Card. Erase all data contained in the Copy Card. NOTE: If parameter "Fr" is used, the data entered will be permanently lost. This operation cannot be cancelled.	/	/	/	/	/	/	2
FUNCTIONS ('FnC' folder)								
rAP	Reset pressure switch alarms.	/	/	/	/	/	/	2
rES	Reset HACCP alarms.	/	/	/	/	/	/	2

DISCLAIMER

This document is the exclusive property of Eliwell and cannot be reproduced or circulated unless expressly authorised by Eliwell. All possible care has been taken to ensure the accuracy of this document; nevertheless, Eliwell cannot accept liability for any damage resulting from its use. The same applies to any person or company involved in preparing and editing this document. Eliwell reserves the right to make aesthetic or functional changes at any time without notice.

LIABILITY AND RESIDUAL RISKS

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. The liability of Schneider Electric and Eliwell is limited to the correct and professional use of the product according to the directives referred to herein and in the other supporting documents, and does not cover any damage (including but not limited to) the following causes:

- installation/uses other than those expressly specified and, in particular, failure to comply with the safety requirements of established standards and/or instructions specified in this document;
- use on equipment that do not provide adequate protection against electric shocks, water or dust when assembled;
- use on equipment which allow access to dangerous parts without the aid of a keyed or tooling locking mechanism;
- tampering with and/or modification of the product;
- installation/use on equipment that do not comply with the regulations in force in the country of installation.

CONDITIONS OF USE

Permitted use

The device must be installed and used in accordance with the instructions provided. In particular, parts carrying dangerous voltages must not be accessible under normal conditions. The device must be adequately protected from water and dust with regard to the application, and must only be accessible using tools or a keyed locking mechanism (with the exception of the front panel). The device is suitable for use in household refrigeration appliances and/or similar equipment and has been tested in accordance with the harmonized European reference standards.

Improper use

Any use other than that expressly permitted is prohibited. The relays provided are of a functional type and can be subject to failure: any protection devices required by product standards, or suggested by common sense for obvious safety requirements, must be installed externally to the controller.

DISPOSAL



The device (or product) must be collected separately in compliance with current regulations on disposal.

Eliwell Controls s.r.l.

Via dell'Industria, 15 - Z.I. Paludi

32016 Alpago (BL) ITALY

T: +39 0437 986 111

www.eliwell.com

Technical Customer Support:

T: +39 0437 986 300


E: Techsuppeliwell@se.com

Sales:

T: +39 0437 986 100 (Italy)

T: +39 0437 986 200 (other countries)

E: saleseliwell@se.com



**UK
CA**

UK Authorized Representative:

Schneider Electric Limited

Stafford Park 5

Telford, TF3 3BL

United Kingdom

MADE IN ITALY

9IS54437.03 • IDPlus 961/974 SMPS • EN • rel. 10/21

© 2021 Eliwell • Tutti i diritti riservati.